




# MiniLaser Aspirating Smoke Detector Installation Manual

|                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Copyright</b>                                                                   | © 2026 Kidde Global Solutions. All rights reserved.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Trademarks and patents</b>                                                      | <p>MiniLaser is a trademark of Kidde Fire Protection LLC.</p> <p>Other trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.</p>                                                                                                                                                                                                                                                                                                                                        |
| <b>Manufacturer</b>                                                                | <p>KGS Safety System (Hebei) Co. Ltd.,<br/>80 Changjiang East Road, QETDZ, Qinhuangdao 066004, Hebei, China.</p> <p>Authorized EU manufacturing representative:<br/>KGS Fire &amp; Security B.V., Kelvinstraat 7, NL-6003 DH, Weert, The Netherlands.</p>                                                                                                                                                                                                                                                                                                  |
| <b>Firmware version</b>                                                            | This publication is for MiniLaser detectors with firmware version 3.0 or later.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Conformity</b>                                                                  | <b>CE</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>European Union Directives</b>                                                   | <p>2014/30/EU (EMC Directive): This device is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU.</p>                                                                                                                                                                                                                                                                                                                                                                                                     |
|  | <p>2012/19/EU (WEEE Directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: <a href="http://recyclethis.info">recyclethis.info</a>.</p> <p>IEC 60825-1 This product is a Class I Laser product. The unit incorporates a Class 3B embedded laser which must not be removed from the detector.</p> |
| <b>Contact information and product documentation</b>                               | For contact information or to download the latest product documentation, visit <a href="http://firesecurityproducts.com">firesecurityproducts.com</a> .                                                                                                                                                                                                                                                                                                                                                                                                    |

# Content

|                   |                                        |           |
|-------------------|----------------------------------------|-----------|
|                   | Important information                  | ii        |
| <b>Chapter 1</b>  | <b>Introduction</b>                    | <b>1</b>  |
|                   | System overview                        | 2         |
|                   | Product overview                       | 4         |
| <b>Chapter 2</b>  | <b>Installation</b>                    | <b>7</b>  |
|                   | Electrical safety                      | 8         |
|                   | Installation                           | 8         |
|                   | Connections                            | 16        |
| <b>Chapter 3</b>  | <b>Configuration and commissioning</b> | <b>25</b> |
|                   | Local or Remote configuration          | 26        |
|                   | Local configuration                    | 27        |
|                   | Remote configuration                   | 30        |
|                   | Commissioning                          | 31        |
| <b>Chapter 4</b>  | <b>Maintenance and troubleshooting</b> | <b>37</b> |
|                   | Maintenance                            | 38        |
|                   | Troubleshooting                        | 41        |
|                   | System reset                           | 43        |
|                   | Firmware updates                       | 43        |
| <b>Chapter 5</b>  | <b>Pipe installation examples</b>      | <b>45</b> |
|                   | T-shaped pipe installations            | 46        |
|                   | I-shaped pipe installations            | 51        |
| <b>Chapter 6</b>  | <b>Technical specifications</b>        | <b>61</b> |
| <b>Appendix A</b> | <b>Regulatory information</b>          | <b>65</b> |
|                   | <b>Index</b>                           | <b>68</b> |

# Important information

## Introduction

This is the installation and operation manual for the MiniLaser Aspirating Smoke Detector. Read these instructions and all related documentation entirely before installing or operating this product.

## Product compatibility

Products compatible with the MiniLaser are listed in the product compatibility list. Only those products specified in the compatibility list are guaranteed to be compatible.

To download the latest product compatibility list, visit [firesecurityproducts.com](http://firesecurityproducts.com).

## Firmware compatibility

Information in this document covers MiniLaser detectors with firmware version 3.0 or later.

This document must not be used as a guide for installation, configuration, or operation of detectors with an earlier firmware version.

To check the firmware version, see “Checking the currently installed firmware version” on page 43.

## Limitation of liability

To the maximum extent permitted by applicable law, in no event will KGS Fire & Security be liable for any lost profits or business opportunities, loss of use, business interruption, loss of data, or any other indirect, special, incidental, or consequential damages under any theory of liability, whether based in contract, tort, negligence, product liability, or otherwise. Because some jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages the preceding limitation may not apply to you. In any event the total liability of KGS Fire & Security shall not exceed the purchase price of the product. The foregoing limitation will apply to the maximum extent permitted by applicable law, regardless of whether KGS Fire & Security has been advised of the possibility of such damages and regardless of whether any remedy fails of its essential purpose.

Installation in accordance with this manual, applicable codes, and the instructions of the authority having jurisdiction is mandatory.

While every precaution has been taken during the preparation of this manual to ensure the accuracy of its contents, KGS Fire & Security assumes no responsibility for errors or omissions.

## Product warnings and disclaimers

These products are intended for sale to and installation by qualified professionals. KGS Fire & Security cannot provide any assurance that any person or entity buying its products, including any “authorized dealer” or “authorized reseller”, is properly trained or experienced to correctly install fire and security related products.

For more information on warranty disclaimers and product safety information, please check <https://firesecurityproducts.com/policy/product-warning/> or scan the QR code:



## Advisory messages

Advisory messages alert you to conditions or practices that can cause unwanted results. The advisory messages used in this document are shown and described below.

---

**WARNING:** Warning messages advise you of hazards that could result in injury or loss of life. They tell you which actions to take or to avoid in order to prevent injury or loss of life.

---

---

**Caution:** Caution messages advise you of possible equipment damage. They tell you which actions to take or to avoid in order to prevent damage.

---

**Note:** Note messages advise you of the possible loss of time or effort. They describe how to avoid the loss. Notes are also used to point out important information that you should read.



# Chapter 1

## Introduction

### Summary

This chapter provides an introduction to the detector, the user interface, and the LED indications.

### Content

|                  |   |
|------------------|---|
| System overview  | 2 |
| Product range    | 2 |
| Introduction     | 2 |
| ClassiFire       | 3 |
| Software         | 3 |
| Product overview | 4 |
| Detector         | 4 |
| User interface   | 5 |
| LED indications  | 6 |

## System overview

### Product range

The MiniLaser product range includes the detector and optional accessories shown below.


**Table 1: Product range**

| Product | Description                                                         |
|---------|---------------------------------------------------------------------|
| 9-30501 | MiniLaser Aspirating Smoke Detector                                 |
| 9-30520 | MiniLaser Expansion Housing (optional accessory – not supplied)     |
| 9-30521 | MiniLaser I/O Functional Module (optional accessory – not supplied) |

### Introduction

The MiniLaser is a highly sophisticated next generation high sensitivity smoke detector that provides all the benefits of air sampling high sensitivity smoke detection, including very early warning.

**Figure 1: MiniLaser detector and user interface**

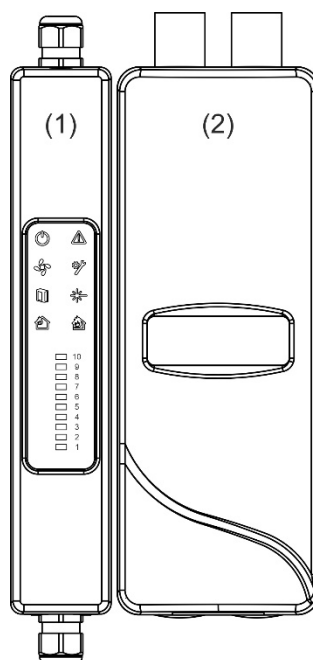

1. User interface
2. Detector

## ClassiFire

ClassiFire is the patented artificial intelligence system for aspirating smoke detectors that continually monitors the environment and internal contamination and automatically adjusts sensitivity to the optimum level.

ClassiFire automatically adjusts sensitivity to suit day/night levels with no need for external input.

ClassiFire automatically sets up the detector to the normal working environment so the detector sensitivity is optimized for its surroundings.

The ClassiFire automatic calibration process is as follows:

1. FastLearn: This stage lasts approximately 15 minutes.

During FastLearn the detector is not fully operational (accurate detection is not guaranteed).

2. Intermediate learn: This stage lasts approximately 24 hours.

During intermediate learn the detector is operational but is still fine tuning the detection algorithm.

3. Normal: Normal indicates that initial environmental learning has ended and that the detector is operating normally.

## Software

The following software applications are available:

- **PipeCAD:** Models and verifies the performance of the pipe network design. All pipework designs **must** be validated using PipeCAD.
- **Remote:** Configures the detector during installation and during system maintenance if Remote configuration is selected.

Contact your local distributor for more details on these applications.

# Product overview

## Detector

The MiniLaser detector is a high sensitivity aspirating smoke detector. It consists of a fan, a dust filter, and a laser head with the corresponding sensors to measure air flow, temperature, and obscuration.


The detector uses the ClassiFire algorithms to determine alarm conditions and keeps a record of Event logs and samples.

The detector must be used with the supplied user interface.

## User interface

The user interface provides LED indicators that display the status of the detector. The user interface must be used with the supplied detector.

**Figure 2: User interface LED indicators**

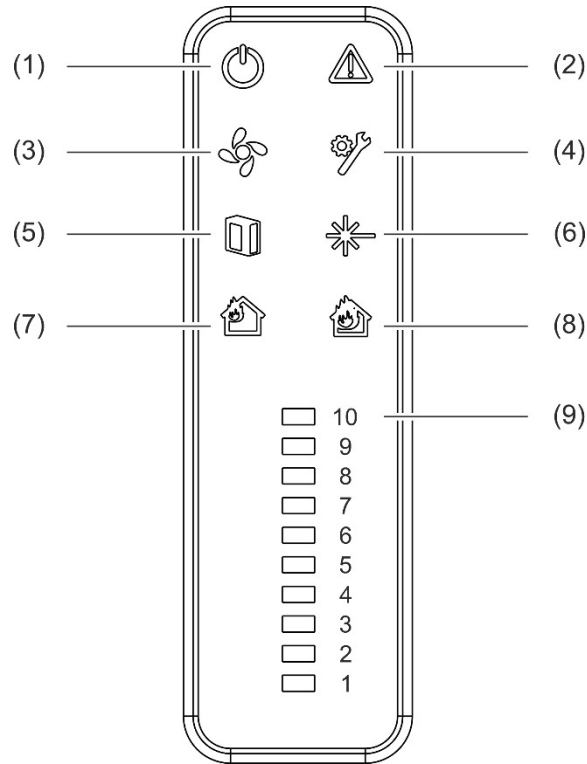

- |                      |                     |
|----------------------|---------------------|
| 1. Power LED         | 6. Laser fault LED  |
| 2. Warning LED       | 7. Prealarm LED     |
| 3. Flow fault LED    | 8. Fire alarm LED   |
| 4. General fault LED | 9. Smoke level LEDs |
| 5. Filter fault LED  |                     |

## LED indications

The user interface LED indications are shown below.

**Table 2: User interface LED indications**

| LED                                                                                                                                             | Colour     | Indication    | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------------------------------------------------------------------|------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                | Green      | Power         | A steady LED indicates that the detector is powered up correctly.                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                                                                | Yellow     | Warning       | <p>A steady LED indicates that detection is aborted due to a fault (fan motor, filter removed, critical temperature), that there is a flow fault, that the detector is disabled or is in power save mode.</p> <p>A fast flashing LED indicates that the detector is in FastLearn mode, is starting up, or that pipe calibration is in process.</p> <p>A slow flashing LED indicates that the detector is in test mode, that one or more features are in test mode, or that the detector is in Demo mode.</p> |
|                                                                | Yellow     | Flow fault    | A steady LED indicates a flow fault or a fan fault.                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                                               | Yellow     | General fault | A steady LED indicates a general fault condition.                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                                                              | Yellow     | Filter fault  | A steady LED indicates a filter fault.                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                                                              | Yellow     | Laser fault   | A steady LED indicates a laser fault.                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                                                              | Red        | Prealarm      | A steady LED indicates a prealarm condition.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                                              | Red        | Fire alarm    | A steady LED indicates a fire alarm condition.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <div> <div>10</div> <div>9</div> <div>8</div> <div>7</div> <div>6</div> <div>5</div> <div>4</div> <div>3</div> <div>2</div> <div>1</div> </div> | Yellow/Red | Smoke level   | <p>A steady LED indicates the current smoke obscuration level.</p> <p>A yellow LED indicates that the smoke level is less than the configured alarm level.</p> <p>A red LED indicates that the smoke level is equal to or greater than the configured alarm level.</p>                                                                                                                                                                                                                                       |

**Note:** If local configuration is selected, alarms and faults are latched (the alarm or fault indication remains active until a system reset is performed, even if the condition that caused the indication has ended). See “System reset” on page 43. The latched configuration can only be changed if Remote configuration is selected.

# Chapter 2

## Installation

### Summary

This chapter provides detailed installation and connection information for your detector.

---

**Caution:** This product must be installed and maintained by qualified personnel adhering to all local or national installation requirements and any other applicable regulations.

---

### Content

Electrical safety 8

Installation 8

    Overview 8

    Internal views and backplane layout 10

    Installing the backplanes 13

Connections 16

    Recommended cables 16

    Connecting inputs, outputs, and the power supply 17

    Connecting pipes 22

    Connecting to Remote 24

## Electrical safety

---

**WARNING:** Electrocution hazard. To avoid personal injury or death from electrocution, remove all sources of power and allow stored energy to discharge before installing or removing equipment.

---

---

**Caution:** Equipment damage hazard. This product is sensitive to electrostatic discharge (ESD). To avoid damage, follow accepted ESD handling procedures.

---

## Installation

### Overview

To install the detector, follow these steps:

1. Fix the detector and user interface backplanes to the wall.  
See “Installing the backplanes” on page 13.
2. Connect all field wiring to the user interface backplane.  
See “Connections” on page 16.
3. Place the detector and user interface (without the covers) onto the backplanes.  
See “Installing the user interface and the detector” on page 21.
4. Install piping.  
See “Connecting pipes” on page 22.
5. Place the front covers onto the detector and user interface.

## General guidelines


Follow these general guidelines to ensure correct placement, connection, and configuration of your product.

**Table 3: Installation guidelines**

| DO                                                                                                                                                                                                                                                                  | DON'T                                                                                                                                                                                                                      |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DO ensure that the power and signal cables are correctly connected before powering up. Incorrect connections may damage the detector.                                                                                                                               | DON'T drop the detector.                                                                                                                                                                                                   |
| DO ensure that all screws for wiring connections are firmly tightened.                                                                                                                                                                                              | DON'T install the detector in damp or exposed areas.                                                                                                                                                                       |
| DO place sampling points so that the detector is able to detect smoke at the earliest opportunity.                                                                                                                                                                  | DON'T remove or connect PCBs when the detector is powered up.                                                                                                                                                              |
| DO ensure that the detector exhaust is not impeded and is in an area with the same atmospheric pressure as the sample pipes (either by placing the detector physically in the protected area or by leading a pipe from the detector exhaust to the protected area). | DON'T reuse dust filter cartridges once they are removed.                                                                                                                                                                  |
| DO ensure that the ambient conditions (humidity, temperature) of the protected area are suitable for the detector.                                                                                                                                                  | DON'T attempt to adjust or alter detector settings other than via the user-programmable functions.                                                                                                                         |
| DO set the appropriate ClassiFire alarm factor for the area to be protected.                                                                                                                                                                                        | DON'T install the detector close to any equipment that may generate high radio frequency levels (such as radio alarms) or units generating high levels of electrical energy (such as large electric motors or generators). |
| DO set the appropriate fan speed for the area to be protected.                                                                                                                                                                                                      | DON'T install the detector in hard to reach areas or so close to other equipment that access and maintenance is difficult.                                                                                                 |
| DO ensure that the detector is secured to the backplane.                                                                                                                                                                                                            | DON'T use excessive force when fitting sampling pipes (this may damage the detector).                                                                                                                                      |
| DO ensure that the front cover is secured to the detector.                                                                                                                                                                                                          | DON'T overtighten the mounting screws.                                                                                                                                                                                     |
| DO use suitable external filtering to protect the detector in areas with high levels of dirt or dust (otherwise contamination may impact the performance of the detector).                                                                                          | DON'T introduce any external elements (fingers, fragments, etc.) into the inside of the detector or the inlet/outlet once it is operational.                                                                               |
| DO replace the detector if the detector fan makes excessive noise or vibrates.                                                                                                                                                                                      |                                                                                                                                                                                                                            |


## Internal views and backplane layout

Figure 3: Internal view

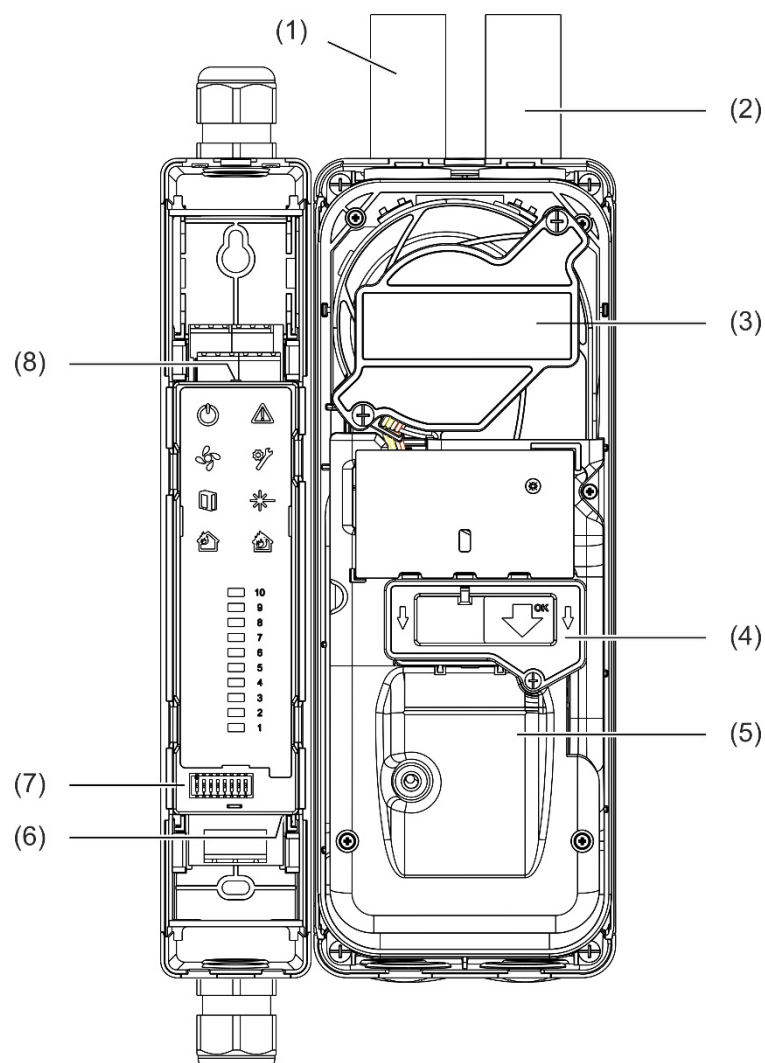

- |                          |                                |
|--------------------------|--------------------------------|
| 1. Exhaust pipe (outlet) | 5. Laser cover                 |
| 2. Sampling pipe (inlet) | 6. USB-C connector             |
| 3. Fan                   | 7. Configuration DIP switch    |
| 4. Filter cover          | 8. Confirm/System Reset button |

**Note:** The detector may be installed onto the detector backplane at 180 degrees to enable pipe entry from below (See Figure 4 on page 11). There is no change to the installation orientation of user interface or the detector backplane.

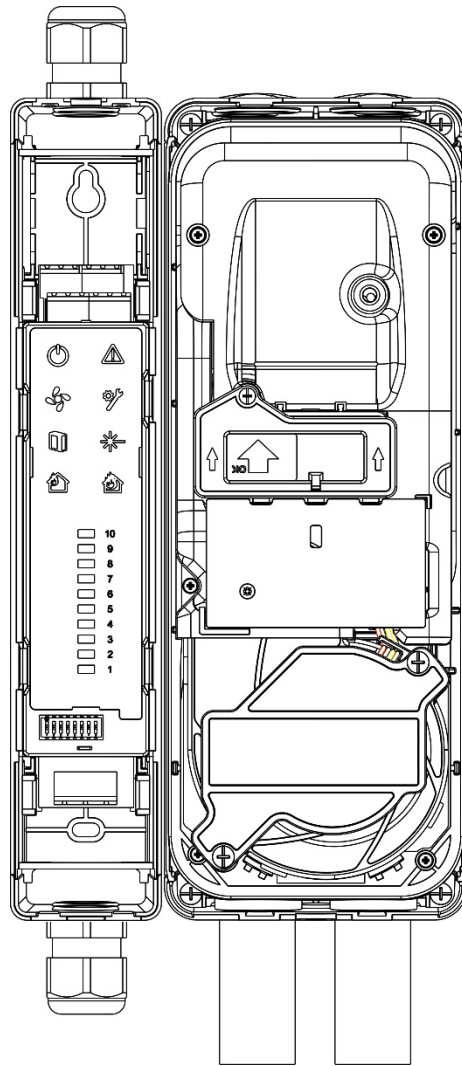
**Figure 4: Detector installed at 180 degrees**

## User interface and detector backplanes

The user interface backplane is used to supply power and provides connections for a single input and three outputs. All wiring is connected to the user interface backplane via the cable knockouts on the top and bottom of the housing.

**Note:** The input can only be configured using the Remote application.

**Figure 5: User interface and detector backplanes**

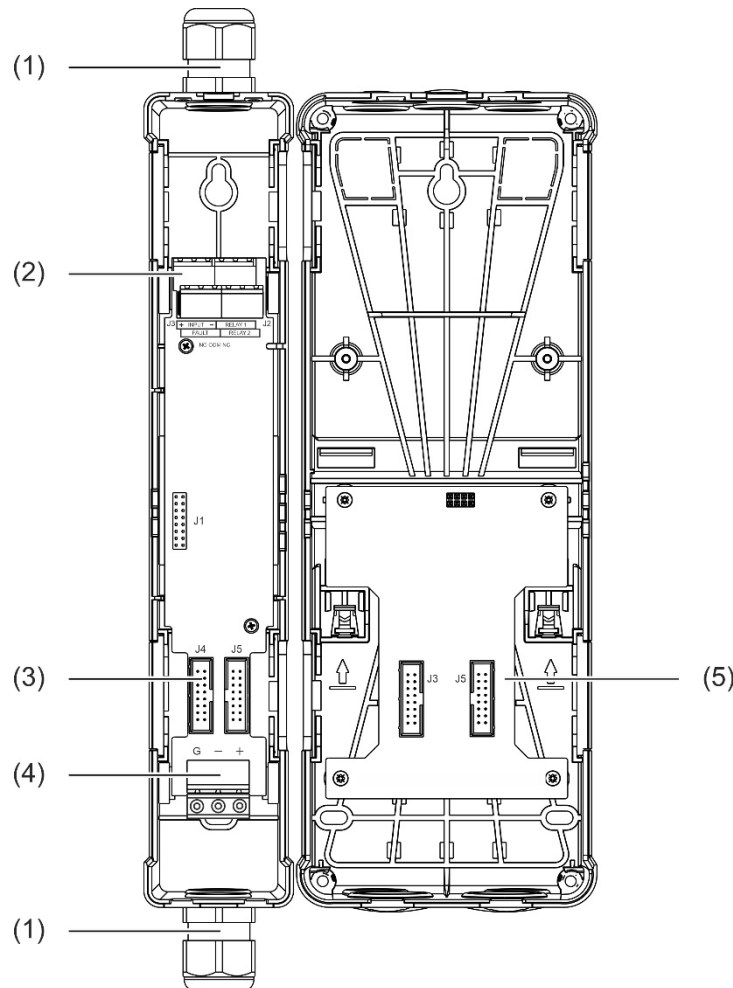

1. Cable glands (not supplied)
2. Input and output connectors
3. J4 and J5 connectors for adjacent detectors or expansion housing
4. Power supply connector
5. J3 and J5 connectors for adjacent user interfaces or expansion housing

## Installing the backplanes


### Installing the backplanes

Install the backplanes onto a DIN rail or directly onto the wall using mounting screws.

#### To install the backplanes onto a DIN rail:

1. Secure the DIN rail to the wall using appropriate fasteners for the mounting surface.
2. Hang the backplanes onto the DIN rail using the mounting hooks on the back of the detector and user interface and push onto the rail until the backplanes click into place (see Figure 6 below).
3. Using a screwdriver, push both of the locking clips on the detector backplane up to lock the unit to the rail.

**Figure 6: Installing the backplanes onto a DIN rail**

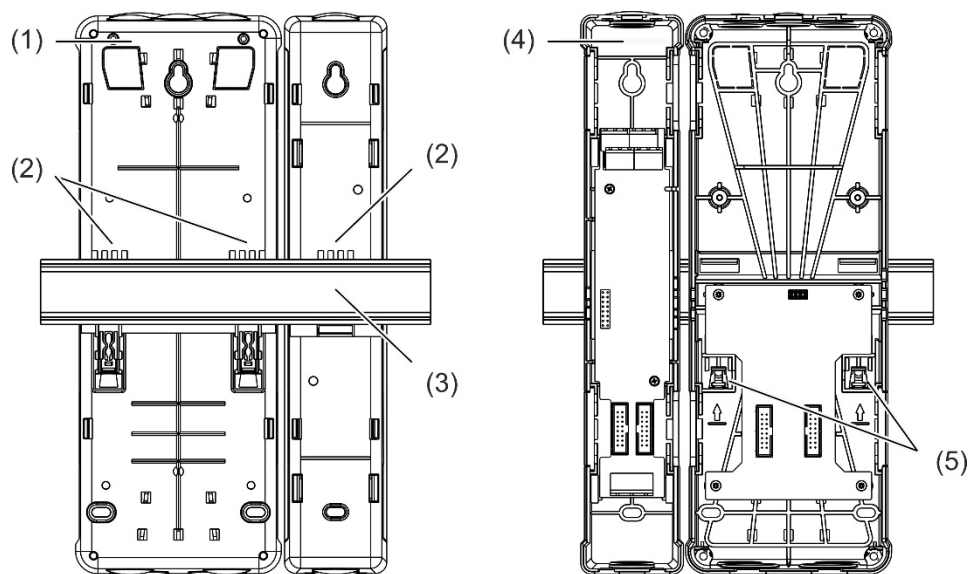


- |                   |                  |
|-------------------|------------------|
| 1. Rear view      | 4. Front view    |
| 2. Mounting hooks | 5. Locking clips |
| 3. DIN rail       |                  |

### To install the backplanes onto a wall:

1. Hold the backplanes to the wall at the required installation height and mark the position of the keyhole screw slots (see Figure 7 below).
2. Remove the backplanes from the wall. Drill a hole in the mounting surface where the keyhole positions were marked and insert an M4 wall plug into each.
3. Insert screws into the keyhole screw slots and hang the backplanes onto the screws.
4. Align the backplanes (ensuring that they are level) and mark the position of all other fixing holes at the holding screw slots
5. Remove the backplanes from the wall, and then drill and plug the remaining fixing holes
6. Replace the backplanes, check alignment, and then tighten all fixing screws.

**Figure 7: Installing the backplanes onto a wall**

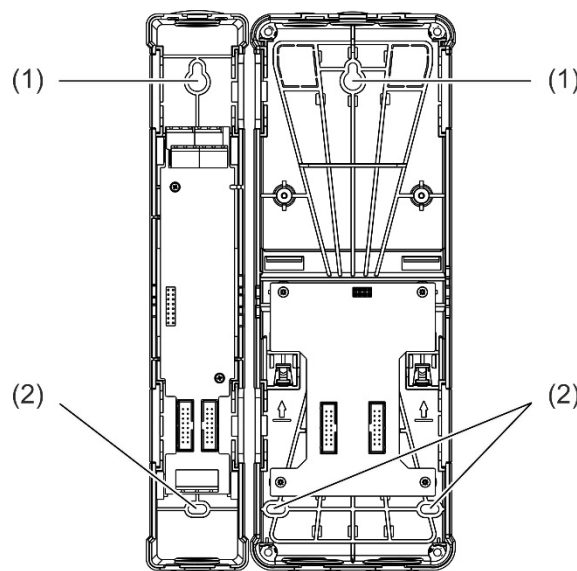

1. Keyhole screw slots
2. Holding screw slots

## Using joining clips

Joining clips are used to attach the user interface and optional expansion housing (not supplied) to the detector.


By default the user interface is attached to the left of the detector but can be moved to the right of the detector if required, as shown below.

---

**WARNING:** To avoid personal injury, take care when inserting or removing the joining clips or protective covers from the side of the backplane. To remove these items, place the backplane face down on a solid surface and use a screwdriver to push the release mechanism, shown in Figure 8 below (this needs to be done before the backplane is installed onto the wall).

---

**Figure 8: Using joining clips**

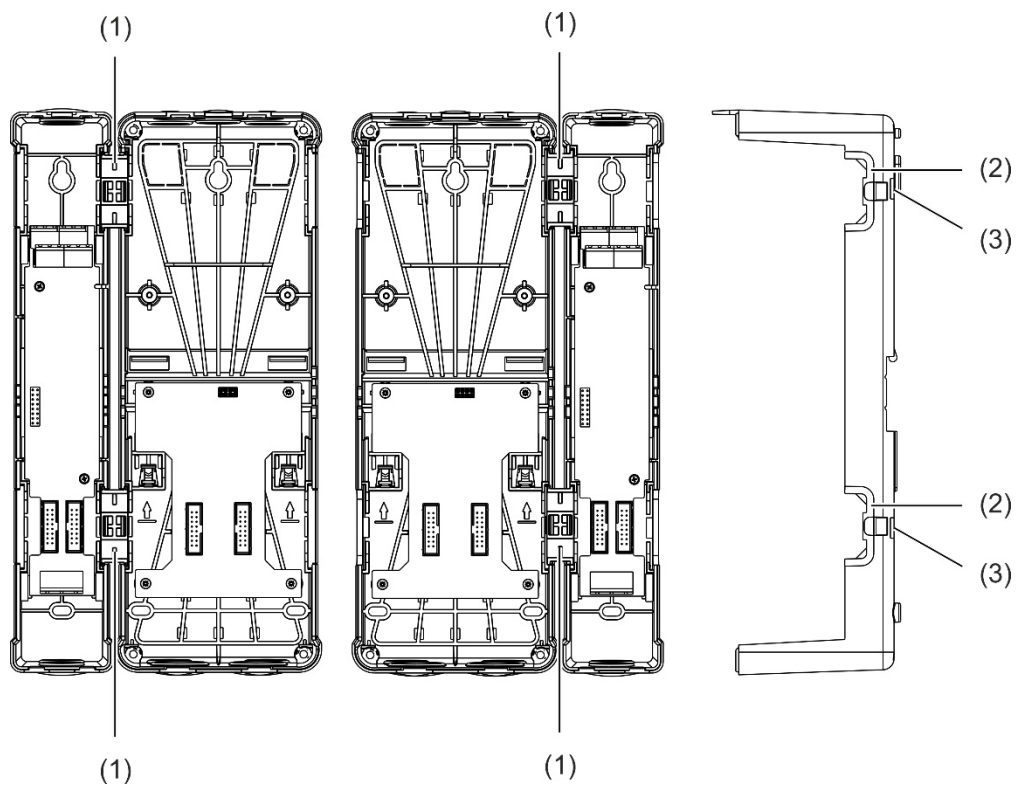

1. Joining clips (front view)
2. Joining clips (side view)
3. Release mechanism for joining clip or protective cover

# Connections

## Recommended cables

Recommended cables for optimal system performance are shown in the table below.

**Table 4: Recommended cables**

| Cable        | Cable requirements                                                | Maximum cable length |
|--------------|-------------------------------------------------------------------|----------------------|
| Power cable  | 3 × 1.5 mm <sup>2</sup> (3 × 16 AWG)                              | 100 m (328 ft.)      |
| System cable | From 1.0 to 2.5 mm <sup>2</sup> (2 or 3 cables from 16 to 14 AWG) | N/A                  |
| USB cable    | Standard USB-C cable                                              | 3 m (9.84 ft.) [1]   |

[1] Observe maximum length to comply with the EMC requirements of EN 54-20.

Other types of cable may be used subject to site-specific electromagnetic interference (EMI) conditions and installation testing.

## Securing cables

Use cable glands to ensure clean and secure connections. All cables should be fed through the cable knockouts on the top and bottom of the user interface housing and secured to eliminate movement.

# Connecting inputs, outputs, and the power supply

## User interface

**Figure 9: Inputs and outputs**

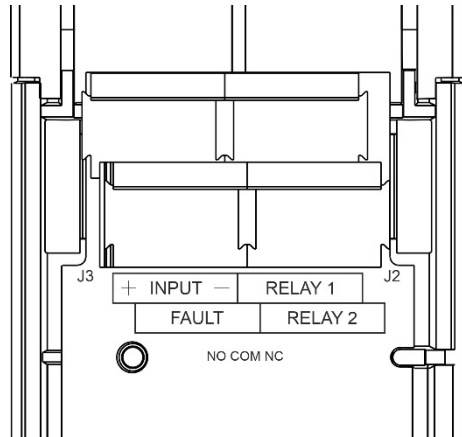


**Figure 10: Power supply**

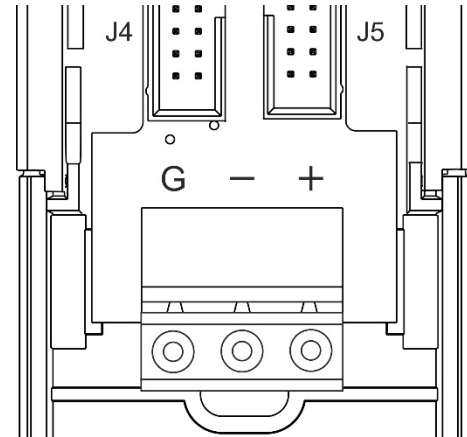


**Table 5: User interface connectors**

| Connector      | PIN | Description                                                                                                         |
|----------------|-----|---------------------------------------------------------------------------------------------------------------------|
| Input [1]      | +   | Input (positive)                                                                                                    |
|                | -   | Input (negative)                                                                                                    |
| Fault relay    | COM | Output (common)                                                                                                     |
|                | NC  | Output (normally closed)                                                                                            |
|                | NO  | Output (normally open)                                                                                              |
| Relay output 1 | COM | Output (common)                                                                                                     |
|                | NC  | Output (normally closed)                                                                                            |
|                | NO  | Output (normally open)                                                                                              |
| Relay output 2 | COM | Output (common)                                                                                                     |
|                | NC  | Output (normally closed)                                                                                            |
|                | NO  | Output (normally open)                                                                                              |
| J4             |     | Ribbon cable connector (to connect to a detector or expansion housing installed to the left of the user interface)  |
| J5             |     | Ribbon cable connector (to connect to a detector or expansion housing installed to the right of the user interface) |
| Power supply   | G   | Power supply (earth)                                                                                                |
|                | -   | Power supply (negative)                                                                                             |
|                | +   | Power supply (positive)                                                                                             |

[1] The input can only be configured using the Remote application.

## Detector

**Figure 11: Detector ribbon cable connectors**

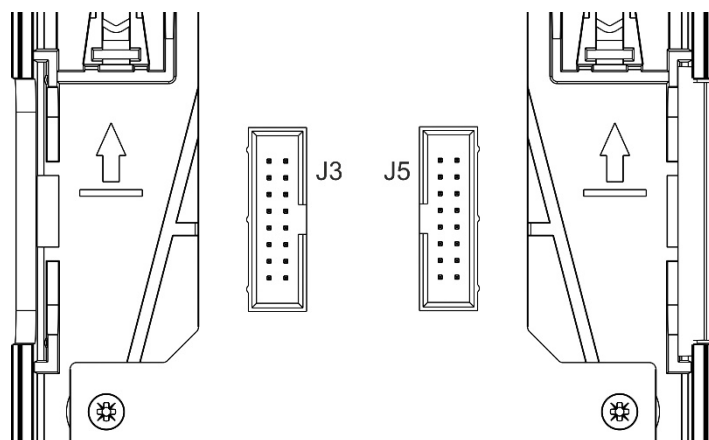


**Table 6: Detector ribbon cable connectors**

| Connector | Description                                                                                                         |
|-----------|---------------------------------------------------------------------------------------------------------------------|
| J3        | Ribbon cable connector (to connect to a user interface or expansion housing installed to the left of the detector)  |
| J5        | Ribbon cable connector (to connect to a user interface or expansion housing installed to the right of the detector) |

### Connecting the input

**Note:** The input can only be configured using the Remote application.

Connect input devices to the INPUT connector.

The input is supervised to detect open, activated, and not activated states. The input requires a 15 k $\Omega$  end-of-line resistor (provided in the accessory kit).

General input activation characteristics are shown in the table below.

**Table 7: General input activation characteristics**

| State                            | Activation value        |
|----------------------------------|-------------------------|
| Not activated (nominal)          | 15 k $\Omega$ $\pm$ 10% |
| Short circuit (activated)        | < 2.7 k $\Omega$        |
| Open circuit (supervision fault) | > 34.1 k $\Omega$       |

### Connecting the fault relay

Connect fault output devices to the FAULT relay.

Outputs are activated by a voltage free relay contact with normally open (NO), normally closed (NC), and common (COM) connections.

The default configuration is Fault.

### Connecting the relay outputs

Connect output devices to the RELAY 1 and RELAY 2 connectors.

Outputs are activated by a voltage free relay contact with normally open (NO), normally closed (NC), and common (COM) connections.

The default configuration for each is shown below.

| Relay          | Default configuration |
|----------------|-----------------------|
| Relay output 1 | Prealarm              |
| Relay output 2 | Fire Alarm            |

### Connecting the power supply

---

**Caution:** Ensure that the installed power supply covers the power consumption requirements for your installation.

---

Connect the power supply to the power supply connector.

The detector can be powered by any EN 54-4 or UL/cUL and FM compliant monitored 24 VDC power supply of sufficient capacity for the installation requirements.

**Note:** For compliance with EN 54-20, the detector must be powered by a power supply approved to EN 54-4.

## Connecting to a fire alarm control panel

The detector provides the following options for interfacing with fire alarm control panels.

| Configuration method | Connection                                                                                                                                                                                                                                                                                                                   |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Local                | Connect the detector output to the fire panel input. This option allows the detector to send event notifications to the fire panel. The detector output and fire panel input require appropriate configuration.                                                                                                              |
| Local or Remote      | Connect the detector output to the fire panel input and the fire panel output to the detector input. This option allows the detector to send event notifications to the fire panel and the fire panel to send commands to the detector. The detector and control panel inputs and outputs require appropriate configuration. |

## Installing the user interface and the detector


Install the user interface and the detector (without the covers) onto the respective backplanes using the screws provided (see Figure 12 below).

Each detector includes four captive screws (attached to each corner of the unit).

**Caution:** To avoid damaging the mounting pillars, always use a manual screwdriver to secure the user interface and detector to the backplanes. Do not use a power screwdriver.

The detector may be installed onto the backplane at 180 degrees (see Figure 4 on page 11). This allows the sampling and exhaust pipes to enter from the bottom of the unit instead of the top. There is no change to the installation orientation of the user interface or the detector backplane.

**Figure 12: Installing the user interface and the detector**

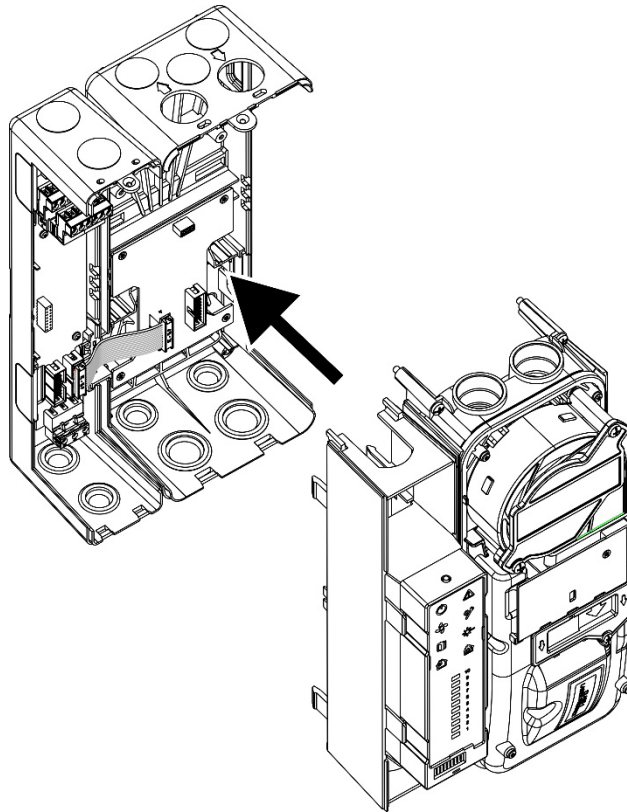

## Connecting pipes

**Caution:** To comply with EN 54-20 requirements use one of the pipe designs shown in Chapter 5 “Pipe installation examples” on page 45. For any other pipe network design, the pipe network must be designed and its performance verified using PipeCAD pipe modelling software before installing pipes. See your PipeCAD documentation for more information.

To assist pipe installation, the following pipe adaptors are available:


- Offset pipe adaptor (supplied)
- Straight pipe adaptor (not supplied)

The adaptors are designed to facilitate the removal of the detector from the backplane without fully removing the pipes.

**Note:** Do not use glue on the pipe adaptors.

The detector also supports pipe entry without the use of the pipe adaptors (for both 25 and 27 mm pipes), but this option does not allow for the easy removal of the detector described above.

**Figure 13: Connecting pipes using a pipe adaptor**

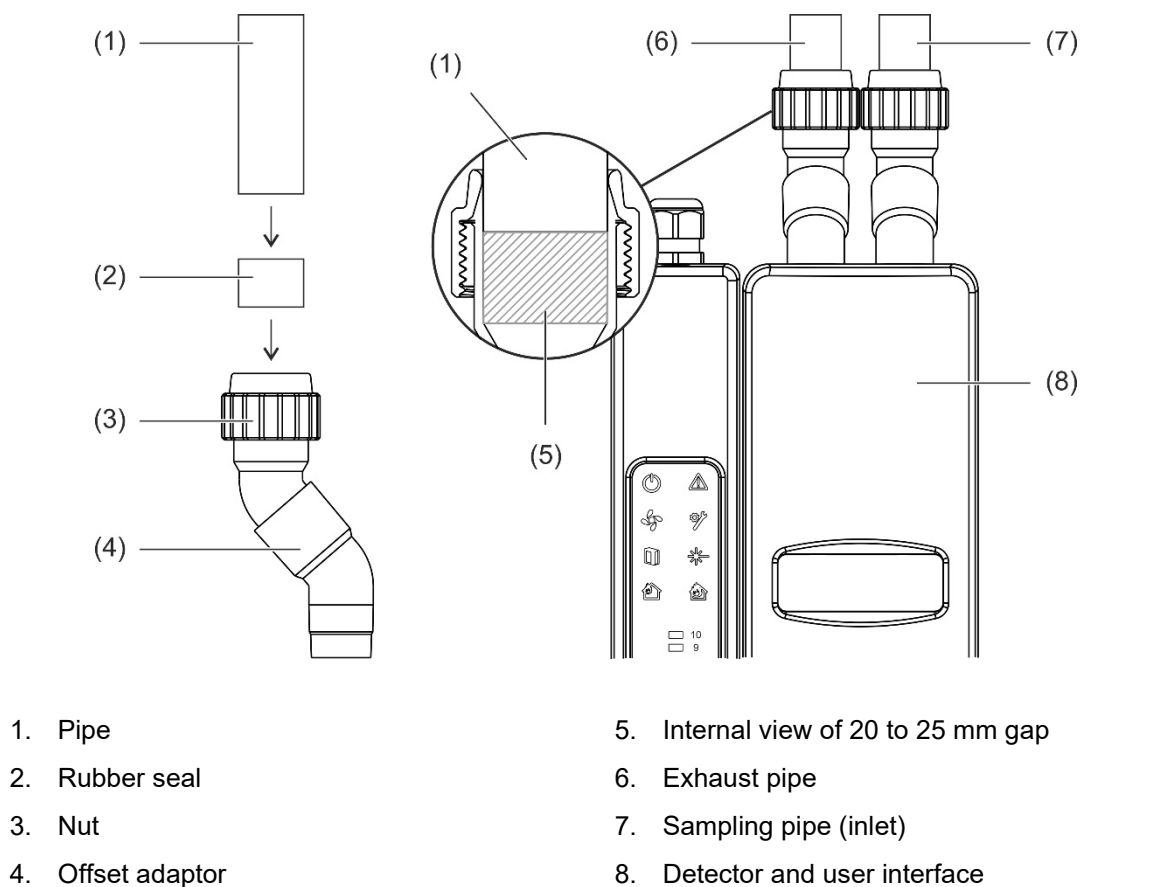

**To connect pipes when using a pipe adaptor**

1. Loosen the adaptor nut and slide the pipe into the adaptor, ensuring that the pipe is firmly enclosed by the rubber seal.

Leave a gap of approximately 20 to 25 mm (0.8 to 0.98 in.) between the end of the pipe and the end of the adaptor inlet so that the adaptor can be moved up the pipe later, if required.

2. Tighten the adaptor nut loosely (enough that the pipe does not move).
3. Push the adaptor through the backplane and into the detector (the exhaust pipe on the left, the sampling pipe on the right).
4. Tighten the adaptor nut firmly.

**To remove the detector when using a pipe adaptor**

1. Loosen the adaptor nut and slide the adaptor upwards, until it clears the detector and onto the pipe (using the 20 to 25 mm gap left during installation).
2. Remove the detector.

## Connecting to Remote

Use the Remote application to:

- View the current configuration settings and the installed firmware version if local configuration is selected.
- Configure advanced settings when Remote configuration is selected (see “Local or Remote configuration” on page 26).

To use Remote, connect the PC to the MiniLaser user interface using a USB-C cable.

### To connect to Remote:

1. Using a USB-C cable, connect your PC to the USB type C connector on the user interface (see Figure 3 on page 10 for the connector location).
2. Open Remote, and then click on Communication Settings.
3. Select USB, and then select the COM Port.
4. Click Connect, and then enter the four-digit access code.

This option may only be used for temporary connections.

### Notes:

The default access code is 4444. To prevent unauthorized access, you must change this the first time you connect (access code 0000 is not permitted).

If an invalid access code is entered three times in a row, access is blocked for 10 minutes.

If you forget the access code, reset it as follows:

1. Using a USB-C cable, connect your PC to the USB type C connector on the user interface (see Figure 3 on page 10 for the connector location).
2. Open Remote, and then click on Communication Settings.
3. Select Reset Password.
4. Enter a new four-digit access code.
5. Press and hold the Confirm/System Reset button on the detector and click OK to change the access code.

# Chapter 3

## Configuration and commissioning

### Summary

This chapter provides configuration and commissioning information for your detector.

### Content

|                               |    |
|-------------------------------|----|
| Local or Remote configuration | 26 |
| Local configuration           | 27 |
| Default settings              | 27 |
| Configuration process         | 27 |
| Setting the fan speed         | 28 |
| Setting the alarm factor      | 28 |
| Setting the flow fault delay  | 29 |
| Setting the flow fault level  | 30 |
| Setting the alarm delay       | 30 |
| Remote configuration          | 30 |
| Commissioning                 | 31 |
| Overview                      | 31 |
| Installation inspection       | 31 |
| Configuration check           | 32 |
| Commissioning tests           | 32 |
| Connectivity check            | 36 |

# Local or Remote configuration

## Choosing the configuration method

The detector can be configured locally (using the integrated DIP switch) or by using the Remote application. Only one configuration method can be used.

| Configuration | Description                                                                                                                                                                                                                        |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Local         | <p>Select this option to configure standard presets for fan speed, alarm factor, flow fault, and alarm delay quickly and easily using the integrated DIP switch.</p> <p>See “Local configuration” on page 27 for more details.</p> |
| Remote        | <p>Select this option to configure advanced features using the Remote application.</p> <p>See the Remote application and integrated Help documentation for more details.</p>                                                       |

## Setting the configuration method

Set the configuration method using DIP switch 1, as shown in the table below. The default setting is local configuration.

The DIP switch is located on the user interface (see Figure 3 on page 10).

| DIP switch setting                                                                  | Description                                                           |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
|  | Local configuration using the integrated DIP switch (default setting) |
|  | Remote configuration using the Remote application                     |

## Local configuration

**Caution:** Only one configuration method can be used. If Remote configuration is selected (DIP switch 1 is OFF), then the detector cannot be configured locally and any settings for DIP switches 2 to 8 are ignored.

This section describes local configuration using the integrated DIP switch.

### Default settings

The default settings for local configuration are shown below.

**Table 8: Default settings for local configuration**

| Parameter            | DIP Switch | Default setting     |
|----------------------|------------|---------------------|
| Configuration method | 1          | Local configuration |
| Fan speed            | 2 and 3    | 4                   |
| Alarm factor         | 4 and 5    | 4                   |
| Flow fault delay     | 6          | 120 seconds         |
| Flow fault level     | 7          | 20%                 |
| Alarm delay          | 8          | 5 seconds           |

### Configuration process

#### To configure the detector for the first time:


1. Set DIP switch 1 to ON to select local configuration using the integrated DIP switch.
2. Set the fan speed, alarm factor, flow fault delay, flow fault level, and alarm level DIP switches as required.
3. Press the Confirm/System Reset button on the user interface to apply the configuration.

#### To making changes to an existing configuration:

1. Remove the user interface cover.
2. Change the configuration method, fan speed, alarm factor, flow fault delay, flow fault level, or alarm level DIP switches as required.
3. Press the Confirm/System button on the user interface to apply the changes to the configuration.

## Setting the fan speed

Set the fan speed using DIP switches 2 and 3, as shown in the table below. The default setting is 4.


| DIP switch setting                                                                | Description [1]               |
|-----------------------------------------------------------------------------------|-------------------------------|
|  | Fan speed 2                   |
|  | Fan speed 4 (default setting) |
|  | Fan speed 7                   |
|  | Fan speed 10                  |

[1] Only four of the 10 available fans speeds can be configured by DIP switch. To set other fan speeds, select Remote configuration.

## Setting the alarm factor

Set the alarm factor using DIP switches 4 and 5, as shown in the table below. The default setting is 4.

The alarm factor configures the detector sensitivity. This value affects the calculation of all alarm levels except Fire Alarm 2. A lower value configures a higher sensitivity, a higher value configures a lower sensitivity. See Table 9 on page 29 for suggested settings.

| DIP switch setting                                                                  | Description                      |
|-------------------------------------------------------------------------------------|----------------------------------|
|  | Alarm factor 2                   |
|  | Alarm factor 4 (default setting) |
|  | Alarm factor 6                   |
|  | Alarm factor 8                   |

**Note:** The working alarm factor value may be higher than the configured value as the ClassiFire algorithm automatically adjusts the value based on the environmental conditions at the end of the FastLearn procedure.

**Table 9: Suggested alarm factor settings**

| Alarm factor | Sensitivity | Probability of nuisance alarm | Suggested protected area                   |
|--------------|-------------|-------------------------------|--------------------------------------------|
| 0            | Very high   | Once per year                 | Semiconductor manufacturing clean room [1] |
| 1            | High        | Once per 5 years              | Computer room [1]                          |
| 2            | High        | Once per 10 years             | Non-smoking office                         |
| 3            | High        | Once per 50 years             | Clean factory [1]                          |
| 4            | Medium      | Once per 1,000 years          | Warehouse                                  |
| 5            | Medium      | Once per 5,000 years          | Warehouse with diesel trucks operating [1] |
| 6            | Medium      | Once per 10,000 years         | Warehouse with diesel trucks operating     |
| 7            | Low         | Once per 20,000 years         | Warehouse with diesel trucks operating [1] |
| 8            | Low         | Once per 100,000 years        | Warehouse with diesel trucks operating     |
| 9            | Very low    | N/A                           | Duct systems [1]                           |
| 10           | Very low    | N/A                           | Duct systems [1]                           |

[1] These settings are only available via Remote configuration.

## Setting the flow fault delay

Set the flow fault delay using DIP switch 6, as shown in the table below. The default setting is 120 seconds.

| DIP switch setting                                                                  | Description                   |
|-------------------------------------------------------------------------------------|-------------------------------|
|  | 120 seconds (default setting) |
|  | 240 seconds                   |

## Setting the flow fault level

Set the flow fault level using DIP switch 7, as shown in the table below. The default setting is 20%.

| DIP switch setting                                                                | Description           |
|-----------------------------------------------------------------------------------|-----------------------|
|  | 20% (default setting) |
|  | 40%                   |

## Setting the alarm delay

Set the alarm delay using DIP switch 8, as shown in the table below. The default setting is 5 seconds.

| DIP switch setting                                                                  | Description                 |
|-------------------------------------------------------------------------------------|-----------------------------|
|    | 5 seconds (default setting) |
|  | 30 seconds                  |

## Remote configuration

**Caution:** Only one configuration method can be used. If local configuration is selected (DIP switch 1 is ON), then the detector cannot be configured using the Remote application.

Connect your PC to the detector as described in “Connecting to Remote” on page 24.

See the Remote application and integrated Help documentation for more details.

# Commissioning

## Overview

Perform the following tasks when commissioning the detector:

- Inspect the installation
- Check the configuration
- Perform commissioning tests
- Check connectivity (where applicable)

## Installation inspection

Inspect the installation to confirm that it has been designed and installed correctly for the intended application.

- When using the detector for high and enhanced sensitivity applications (Class A or Class B), ensure that the installation conforms to the design specification.
- When using the detector to replace point type detectors (Class C), ensure that the installation conforms to all relevant local or national standards.
- When using the detector as a primary sampling system, ensure that the pipe and sample points are installed correctly onto the air handling unit within the airflow. Ensure that the airflow in the pipe is balanced if using multiple air handling units.
- Check that the installation is clean and that no construction debris remains.
- Check that the pipe network is correctly installed that all hole positions and sizes are correct.
- Check that all sampling points are clearly identified and that there are no obstructions to the sampling points or remote capillaries.
- Check all electrical wiring and connections.
- Check that the power supply is sufficient for the installation.

## Configuration check

Ensure that the following have been correctly configured before performing commissioning tests:

- Fire alarm thresholds and sensitivity settings
- Alarm delays
- Flow parameters
- Any other configuration options for the intended application

## Commissioning tests

Ensure that the protected area is in its normal operational state before any commissioning tests are performed. Commissioning must include sufficient testing to verify that sampling holes are fully functional. Results from the tests should be recorded for future reference.

Commissioning tests should include (but are not limited to):

- Maximum smoke transport time
- Fault detection
- Alarm detection (smoke tests)

### Acclimation period

The detector operates at a reduced sensitivity for approximately 24 hours. ClassiFire handles the appropriate day and night sensitivity settings, where required. All air handling units, thermostats, and other systems that impact the operating environment should be turned on to reflect normal operating conditions.

FastLearn starts automatically if the detector is new (or restarting). The FastLearn process lasts approximately 15 minutes and is followed by approximately 24 hours of intermediate learning.

### Maximum smoke transport time

Maximum smoke transport time is measured by introducing a small quantity of smoke into the furthest sample hole and then measuring the time between first introducing the smoke and observing a response at the detector.

The results of this test and the calculated maximum transport time from PipeCAD must be recorded. Measured transport time less than the calculated time is acceptable.

**To measure the maximum transport time:**

1. Determine the furthest sampling point from the detector.
2. Allow test smoke to enter the pipe at the furthest sampling point.
3. Record the amount of time it takes for the detector to respond.

**Notes:**

Test all pipes individually to confirm full integrity.

Ensure that any measured transport time matches requirements in the installation design specification, where applicable.

**Fault detection**

Block and unblock all pipes to ensure that flow faults are reported correctly. There is a default delay of 120 seconds before a flow fault is reported (this delay is configurable).

Disconnect the power supply to ensure that power supply faults are reported correctly.

Power fault reporting requires the 24 VDC power supply to communicate the fault via the detector input (the input must be configured accordingly using the Remote application).

**Alarm detection (smoke tests)**

---

**Caution:** These tests may activate installed point detectors at the site. Always ensure that site personnel are consulted before smoke tests are performed and that all measures are taken to avoid unwanted alarm activations.

---

Smoke tests measure the amount of time to activate alarm states. The test should be repeated at least three times with consistent results.

Typical smoke tests include:

- Wire burn tests for Class A and Class B installations
- Smoke pellet tests for Class C installations

Use of canned smoke is not recommended to test the detector as the particles don't last long enough to travel the full length of the sampling pipe.

## Wire burn test

This test is typically used for Class A and Class B installations.

The wire burn test is considered the most representative test of incipient fire hazard detection in telecommunications or computer room environments.

The test is performed by applying a voltage to a piece of PVC-insulated cable. Smoke is produced from the overheated PVC insulation by evaporation and condensation of the plasticiser.

As the wire becomes hotter, hydrogen chloride (HCl) gas is emitted from the insulation. The by-products of overheated PVC insulation can be detected by the system.

### Performing a wire burn test (option 1)

The following test is considered unlikely to produce hydrochloric acid vapour. This test may be undertaken in underfloor spaces or ceiling voids.

1. Connect a 2 m (6.5 ft.) length of wire to a 6 VAC source of at least 16 A rating per wire for a period of 3 minutes.
2. The detector should respond within 120 seconds of cessation of energization. After this period, very little smoke is given off.

### Notes:

The wire is subject to cooling if positioned in direct contact with air flows and may need to be shielded.

The wire cross-section should be AWG 10 with the following diameter and area:

- Diameter 2.59 mm (0.10189 in.)
- Cross-Section Area 5.0 mm<sup>2</sup> (0.00775 in.<sup>2</sup>)

## Performing a wire burn test (option 2)

---

**WARNING:** The following test is likely to produce a sufficiently high temperature to generate small quantities of hydrogen chloride or hydrochloric acid gas. Be sure to maintain a safe distance from the wire while voltage is applied.

---

Perform this test in underfloor spaces or ceiling voids where rapid air flow may render the previous test unsuitable.

1. Connect a 1 m (3.25 ft.) length of wire to a 6 VAC source of at least 16 A rating per wire for a period of 1 minute.
2. The system should respond within 120 seconds of cessation of energization. After this period most of the insulation should be burned off.

### Notes:

The wire cross-section should be AWG 10 with the following diameter and area:

- Diameter 2.59 mm (0.10189 in.)
- Cross-section area 5.0 mm<sup>2</sup> (0.00775 in.<sup>2</sup>)

## Smoke pellet test

This test is typically used for Class C installations.

### Performing a smoke pellet test

1. Place a 20 x 20 cm (7.87 x 7.87 in.) metal plate onto a 5.8 KW butane gas burner (or equivalent electrical heater), and then place a 7-9 g smoke pellet onto the plate.
2. Place a metal chimney over the pellet. The chimney should be 2 to 6 mm (0.08 to 0.24 in.) thick, at least 100 mm (3.94 in.) in diameter and 150 mm (5.9 in.) high.

Either the base of the chimney or the metal plate should have ventilation holes.

3. Ignite the burner and start the timer when the pellet starts to produce smoke.
4. Extinguish the burner after the required time has elapsed.

The amount of time depends on the room height and the temperature differential (the temperature difference between the level at which the test is conducted and the level at which the aspirating sampling points are mounted). See Table 10 on page 36.

**Table 10: Burn times for smoke pellet tests**

| Height                           | Temperature Differential |                              |                              |                               |                              |
|----------------------------------|--------------------------|------------------------------|------------------------------|-------------------------------|------------------------------|
|                                  | <3°C<br>(<37.4°F)        | 3 to 6°C<br>(37.4 to 42.8°F) | 6 to 9°C<br>(42.8 to 48.2°F) | 9 to 12°C<br>(48.2 to 53.6°F) | 12 to 15°C<br>(53.6 to 59°F) |
| 3 to 5 m<br>(9.8 to 16.4 ft.)    | 3s                       | 6s                           | 9s                           | 12s                           | 17s                          |
| 5 to 10 m<br>(16.4 to 32.8 ft.)  | 7s                       | 13s                          | 20s                          | 27s                           | 34s                          |
| 10 to 15 m<br>(32.8 to 49.2 ft.) | 10s                      | 20s                          | 30s                          | 40s                           | 51s                          |
| 15 to 20 m<br>(49.2 to 65.6 ft.) | 13s                      | 27s                          | 40s                          | 54s                           | 67s                          |

## Connectivity check

Ensure that communications between the detector and any fire control and indicating equipment (especially alarm and fault conditions) operate correctly.

Check any other cause and effect requirements, particularly in relation to integration with automatic suppression systems.

# Chapter 4

## Maintenance and troubleshooting

### Summary

This chapter provides maintenance and troubleshooting procedures.

### Content

|                  |    |
|------------------|----|
| Maintenance      | 38 |
| Troubleshooting  | 41 |
| System reset     | 43 |
| Firmware updates | 43 |

# Maintenance

## Visual check

Perform a visual check to verify pipe integrity every six months.

To perform the visual check, inspect the entire piping network and check for abnormalities in the pipes, including any breaks, blockages, crimps, etc.

## Smoke test

Perform a smoke test when the detector is commissioned and then annually. See “Alarm detection (smoke tests)” on page 33 for more details.

## Transport time verification test

Perform a transport time verification test when the detector is commissioned and then annually. The results of the annual tests should be compared to the results recorded after commissioning the detector. See “Maximum smoke transport time” on page 32 for more details.

## Output level check (Remote configuration only)

Check the detector output level within one year of installation and then every two years.

The detector employs a self-monitoring, automatically-adjusting calibration for the system.

The check consists of:

- A visual inspection for any detector fault indications.
- Verifying that the output level (Dlevel) is within 5 to 30%.

If the self-monitoring feature of the system senses that the operational value of the detector head is outside its normal range, a fault is generated.

---

**WARNING:** If Remote reports that the output level value of the detector is higher than 30% during 7 consecutive days, this could be an indication that the detector is contaminated by dust and requires servicing. Investigate any changes in the environment which could explain the higher operational value. If it has been determined that the detector is contaminated, please note that normal detector operation cannot be guaranteed – contact your local supplier for more information and to arrange servicing. Also take precautions to avoid or limit any future contamination.

---

## Cleaning the detector

The outside of the detector should be cleaned with a damp cloth when necessary.

---

**Caution:** Do not use solvents to clean the detector. Use of solvents may damage the detector.

---

### Replacing the dust filter cartridge

---

**WARNING:** Health hazard: The dust in the dust filter will expose maintenance personnel to health hazards, due to the environment of the area being protected. It is recommended that suitable masks and protective clothing be worn when changing filters. Maintenance work must be performed in compliance with national and/or regional requirements and other applicable standards.

---

**Caution:** Use a manual screwdriver when replacing the filter to avoid damage to the filter cover and filter assembly. The maximum torque for the screw is 0.35 Nm. Do not use an electric screwdriver.

---

Replace the dust filter as described below, when required. Used dust filter cartridges are not intended for reuse and should be discarded.

The detector will indicate a Filter fault when the filter value reaches 20%.

---

**Caution:** To avoid internal dust contamination, the detector must be powered off before replacing the dust filter.


---

### To replace the dust filter cartridge:

1. Power off the detector.
2. Remove the detector cover to access the dust filter cartridge.
3. Remove the screw securing the dust filter, and then remove the filter assembly from the detector.
4. Remove the plastic cover from the filter cartridge and dispose of the cartridge.
5. Fit the new cartridge into the plastic cover with IN facing toward the top of the detector as shown in Figure 14. Slide the entire assembly into the detector and make sure the cartridge is correctly installed.
6. Secure the filter assembly using a screw.

**Figure 14: Replacing the dust filter**

---

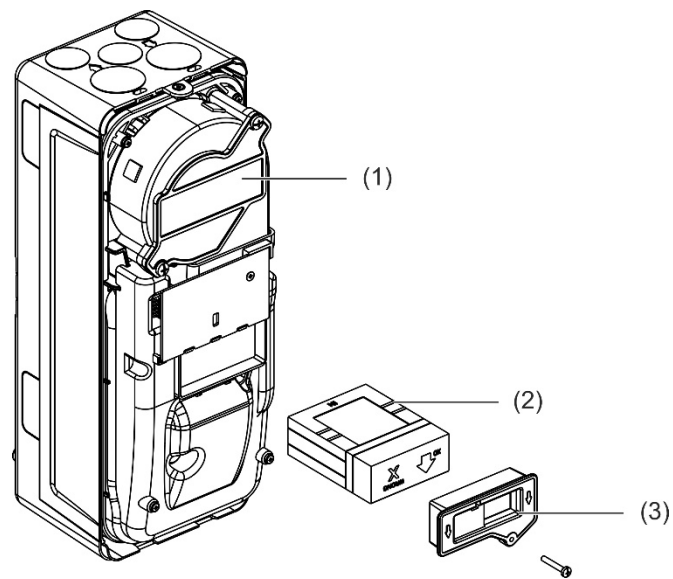

1. Detector
2. Dust filter
3. Plastic cover

# Troubleshooting

This section provides some possible solutions if a problem should occur with your detection system. If the problem is not included here or, if after performing the suggested actions, the problem persists, contact your technical support office.

**Note:** Review the Event log for advanced troubleshooting information. The Event log can only be accessed using the Remote application (see “Connecting to Remote” on page 24).

**Table 11: Troubleshooting guide**

| Problem                                      | Corrective action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Nuisance alarms occur too often              | <p>Check that the ClassiFire alarm factor setting is appropriate for the normal working environment of the protected area. Check that the detector is not in Demo mode. This can be ascertained by viewing the Event log and checking that the entry Demo mode has a higher log entry number than the most recent FastLearn start and FastLearn end entries. Remember that the log entries are in reverse order, with the most recent entries appearing first. If the log shows that demonstration mode was invoked during the last FastLearn period, start a new FastLearn and allow it to complete its 24-hour cycle.</p> <p>From the Event log, check that at least 24 hours have elapsed since the last FastLearn end entry.</p> <p>Check that day/night switchover times are appropriately set to reflect active and non-active periods.</p> |
| Elevated smoke levels do not generate alarms | <p>Check that detector is not disabled or in FastLearn (if disabled, the fault indicator will be lit).</p> <p>Check that the detector sampling points are in the smoke stream.</p> <p>Check that the correct ClassiFire alarm setting has been set.</p> <p>Check that the detector has either had a 24-hour learning period or that it has been placed in demonstration mode.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Low mean output                              | <p>Check that the dust filter does not require changing and that the air plenum chamber is clean. The chamber may become clogged when, for example, heavy building activity has occurred near the sampling pipes. If so, the chamber may require factory service. The detector is not designed to handle large quantities of coarse debris and dust.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Detector sensitivity varies over time        | <p>There are many reasons why particle densities may vary, and the ClassiFire system automatically compensates for this in order to replace the likelihood of nuisance alarms due to normal variations in background smoke density. Within limits set by the ClassiFire alarm factor, this is a normal part of the detector's operation.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

| Problem            | Corrective action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Flow fault errors  | <p>These occur when the airflow rate into the detector exceeds the preprogrammed parameters. As the detector “learns” the flow setup from the initial installation, this usually means that there has been some change in conditions. A Flow High fault may indicate that a sampling pipe is damaged, and a Flow Low fault may indicate that the pipe has been blocked (for example, by nearby building operations).</p> <p>If the detector input is sampled from one area and the exhaust is in another area with different pressure (for example, the detector is in a roof space and sampling from an enclosed room), this may lead to flow faults. In this case, it would be necessary to lead a pipe from the exhaust to the protected area to ensure nominal flow.</p> |
| No LED indications | Check that the ribbon cable connecting the detector and the user interface has not been damaged.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## System reset

If local configuration is selected, alarms and faults are latched (the alarm or fault indication remains active until a system reset is performed, even if the condition that caused the indication has ended).

### To perform a system reset:

1. Remove the user interface cover.
2. Press the Confirm/System Reset button on the user interface (see Figure 3 on page 10).

## Firmware updates

### Checking the currently installed firmware version

To check the currently installed firmware version, connect to Remote as described in “Connecting to Remote” on page 24.

### To check the currently installed firmware version:

1. Connect to Remote.  
Remote automatically displays the detector details and firmware version.

### Updating the firmware

#### To update the firmware version:

1. Unzip the downloaded firmware folder to the root of a USB-C flash drive.  
Note: The USB flash drive must be FAT32 format with a maximum capacity of 16 GB. The drive must not be partitioned.
2. Remove the user interface cover.
3. Insert the USB-C flash drive with the new firmware version into the USB-C connector (see Figure 3 on page 10).
4. Press and hold the Confirm/System Reset button on the user interface for 5 seconds.

The firmware update starts automatically.

The yellow Warning and Fault LEDs flash during the update and progress is indicated by the Smoke Level LEDs. Once the update is complete, the LEDs are steady.

5. Press the Confirm/System Reset button again to exit the update process.



# Chapter 5

## Pipe installation examples

### Summary

This chapter provides pipe installation examples and specifications for selected fan speed and alarm factor settings.

### Content

#### T-shaped pipe installations 46

- Overview 46

- Fan speed 2 47

- Fan speed 4 48

- Fan speed 7 49

- Fan speed 10 50

#### I-shaped pipe installations 51

- Overview 51

- Fan speed 2 52

- Fan speed 4 54


- Fan speed 7 56

- Fan speed 10 58

## T-shaped pipe installations

### Overview

Figure 15: T-shaped pipe installations

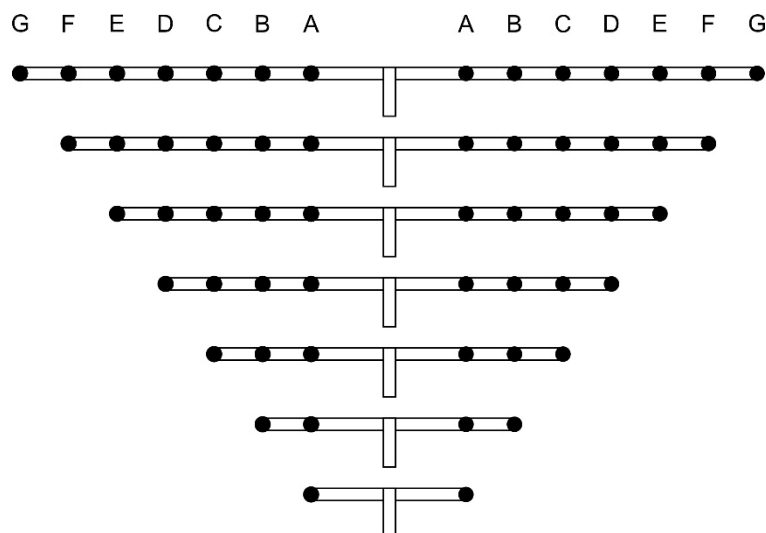

#### Notes:

- All pipes used in the installation must conform to EN 61386-1 Class 1131.
- The total combined pipe length is measured from the detector.
- The maximum combined pipe length is 125 m (including the feed pipe and both branches from the t-piece).
- The distance from the detector to the first sampling hole is 5 m.

## Fan speed 2

The following tables provide hole diameter, transport time, and average sensitivity values per pipe branch for fan speed 2.

**Table 12: Hole diameter (mm)**

| Pipe length (m)        | 10  | 20  | 28  | 36  |
|------------------------|-----|-----|-----|-----|
| Hole ID                | A   | B   | C   | D   |
| <b>Number of holes</b> |     |     |     |     |
| 2                      | 8.0 |     |     |     |
| 4                      | 7.0 | 7.5 |     |     |
| 6                      | 6.0 | 6.5 | 8.0 |     |
| 8                      | 4.5 | 5.0 | 5.0 | 7.5 |

**Table 13: Transport time and average sensitivity**

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                 |                 |
|-----------------|--------------------|-------------------------------|-----------------|-----------------|-----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6  | Alarm Factor 8  |
| 2               | 22                 | 0.12<br>Class A               | 0.26<br>Class A | 0.80<br>Class B | 1.64<br>Class B |
| 4               | 46                 | 0.24<br>Class A               | 0.52<br>Class B | 1.60<br>Class B | 3.28<br>Class C |
| 6               | 69                 | 0.36<br>Class A               | 0.78<br>Class B | 2.40<br>Class C |                 |
| 8               | 93                 | 0.48<br>Class C               | 1.04<br>Class C | 3.20<br>Class C |                 |

## Fan speed 4

The following tables provide hole diameter, transport time, and average sensitivity values per pipe branch for fan speed 4.

**Table 14: Hole diameter (mm)**

| Pipe length (m)        | 10  | 20  | 28  | 36  | 44  | 52  |
|------------------------|-----|-----|-----|-----|-----|-----|
| Hole ID                | A   | B   | C   | D   | E   | F   |
| <b>Number of holes</b> |     |     |     |     |     |     |
| 2                      | 4.5 |     |     |     |     |     |
| 4                      | 4.5 | 4.5 |     |     |     |     |
| 6                      | 3.5 | 3.5 | 3.5 |     |     |     |
| 8                      | 3.0 | 3.0 | 3.0 | 3.5 |     |     |
| 10                     | 3.0 | 3.0 | 3.0 | 3.5 | 3.5 |     |
| 12                     | 3.0 | 3.0 | 3.0 | 3.5 | 3.5 | 4.0 |

**Table 15: Transport time and average sensitivity**

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                 |                 |
|-----------------|--------------------|-------------------------------|-----------------|-----------------|-----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6  | Alarm Factor 8  |
| 2               | 27                 | 0.12<br>Class A               | 0.26<br>Class A | 0.80<br>Class B | 1.64<br>Class B |
| 4               | 38                 | 0.24<br>Class A               | 0.52<br>Class B | 1.60<br>Class B | 3.28<br>Class C |
| 6               | 65                 | 0.36<br>Class A               | 0.78<br>Class B | 2.40<br>Class C |                 |
| 8               | 80                 | 0.48<br>Class B               | 1.04<br>Class B | 3.20<br>Class C |                 |
| 10              | 91                 | 0.60<br>Class C               | 1.30<br>Class C |                 |                 |
| 12              | 92                 | 0.72<br>Class C               | 1.56<br>Class C |                 |                 |

## Fan speed 7

The following tables provide hole diameter, transport time, and average sensitivity values per pipe branch for fan speed 7.

**Table 16: Hole diameter (mm)**

| Pipe length (m)        | 10  | 20  | 28  | 36  | 44  | 52  | 60  |
|------------------------|-----|-----|-----|-----|-----|-----|-----|
| Hole ID                | A   | B   | C   | D   | E   | F   | G   |
| <b>Number of holes</b> |     |     |     |     |     |     |     |
| 2                      | 3.5 |     |     |     |     |     |     |
| 4                      | 4.5 | 4.5 |     |     |     |     |     |
| 6                      | 3.5 | 3.5 | 3.5 |     |     |     |     |
| 8                      | 3.0 | 3.0 | 3.0 | 3.5 |     |     |     |
| 10                     | 3.0 | 3.0 | 3.0 | 3.0 | 3.5 |     |     |
| 12                     | 3.0 | 3.0 | 3.0 | 3.0 | 3.5 | 3.5 |     |
| 14                     | 3.0 | 3.0 | 3.0 | 3.0 | 3.0 | 3.5 | 3.5 |

**Table 17: Transport time and average sensitivity**

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                 |                 |
|-----------------|--------------------|-------------------------------|-----------------|-----------------|-----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6  | Alarm Factor 8  |
| 2               | 30                 | 0.12<br>Class A               | 0.26<br>Class A | 0.80<br>Class B | 1.64<br>Class B |
| 4               | 27                 | 0.24<br>Class A               | 0.52<br>Class B | 1.60<br>Class B | 3.28<br>Class C |
| 6               | 46                 | 0.36<br>Class A               | 0.78<br>Class B | 2.40<br>Class C |                 |
| 8               | 56                 | 0.48<br>Class B               | 1.04<br>Class B | 3.20<br>Class C |                 |
| 10              | 65                 | 0.60<br>Class B               | 1.30<br>Class B |                 |                 |
| 12              | 72                 | 0.72<br>Class B               | 1.56<br>Class B |                 |                 |
| 14              | 95                 | 0.84<br>Class C               | 1.82<br>Class C |                 |                 |

## Fan speed 10

The following tables provide hole diameter, transport time, and average sensitivity values per pipe branch for fan speed 10.

**Table 18: Hole diameter (mm)**

| Pipe length (m)        | 10  | 20  | 28  | 36  | 44  | 52  | 60  |
|------------------------|-----|-----|-----|-----|-----|-----|-----|
| Hole ID                | A   | B   | C   | D   | E   | F   | G   |
| <b>Number of holes</b> |     |     |     |     |     |     |     |
| 2                      | 4.0 |     |     |     |     |     |     |
| 4                      | 4.0 | 4.0 |     |     |     |     |     |
| 6                      | 3.5 | 3.5 | 3.5 |     |     |     |     |
| 8                      | 3.0 | 3.0 | 3.0 | 3.0 |     |     |     |
| 10                     | 2.5 | 2.5 | 2.5 | 2.5 | 2.5 |     |     |
| 12                     | 2.5 | 2.5 | 2.5 | 2.5 | 2.5 | 2.5 |     |
| 14                     | 2.5 | 2.5 | 2.5 | 2.5 | 2.5 | 2.5 | 3.0 |


**Table 19: Transport time and average sensitivity**

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                 |                 |
|-----------------|--------------------|-------------------------------|-----------------|-----------------|-----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6  | Alarm Factor 8  |
| 2               | 20                 | 0.12<br>Class A               | 0.26<br>Class A | 0.80<br>Class B | 1.64<br>Class B |
| 4               | 25                 | 0.24<br>Class A               | 0.52<br>Class B | 1.60<br>Class B | 3.28<br>Class C |
| 6               | 38                 | 0.36<br>Class A               | 0.78<br>Class B | 2.40<br>Class C |                 |
| 8               | 53                 | 0.48<br>Class B               | 1.04<br>Class B | 3.20<br>Class C |                 |
| 10              | 78                 | 0.60<br>Class B               | 1.30<br>Class B |                 |                 |
| 12              | 82                 | 0.72<br>Class B               | 1.56<br>Class B |                 |                 |
| 14              | 88                 | 0.84<br>Class C               | 1.82<br>Class C |                 |                 |

# I-shaped pipe installations

## Overview

Figure 16: I-shaped pipe installations

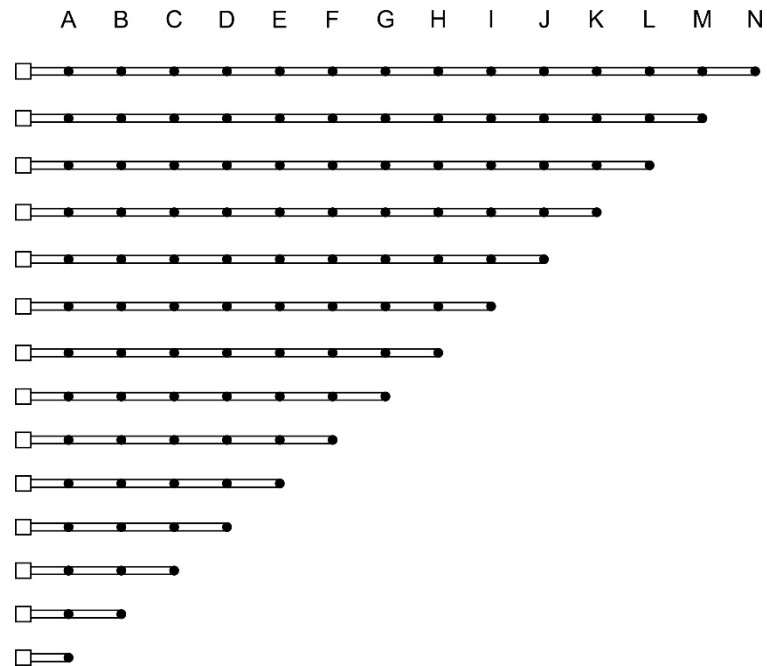

### Notes:

- All pipes used in the installation must conform to EN 61386-1 Class 1131.
- The total pipe length is measured from the detector.
- The maximum single pipe length is 110 m.
- The distance from the detector to the first sampling hole is 5 m.

## Fan speed 2

The following tables provide hole diameter, transport time, and average sensitivity values for fan speed 2.

**Table 20: Hole diameter (mm)**

| Pipe length (m)        | 5   | 12  | 19  | 26  | 33  | 40  | 47  | 54  | 61  | 68  | 75  |
|------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Hole ID                | A   | B   | C   | D   | E   | F   | G   | H   | I   | J   | K   |
| <b>Number of holes</b> |     |     |     |     |     |     |     |     |     |     |     |
| 1                      | 8.0 |     |     |     |     |     |     |     |     |     |     |
| 2                      | 8.0 | 8.0 |     |     |     |     |     |     |     |     |     |
| 3                      | 7.0 | 7.0 | 8.0 |     |     |     |     |     |     |     |     |
| 4                      | 7.0 | 7.0 | 7.5 | 8.0 |     |     |     |     |     |     |     |
| 5                      | 6.0 | 6.0 | 6.0 | 7.0 | 8.0 |     |     |     |     |     |     |
| 6                      | 5.5 | 5.5 | 6.0 | 6.0 | 6.5 | 7.5 |     |     |     |     |     |
| 7                      | 5.0 | 5.0 | 5.0 | 5.0 | 5.0 | 5.5 | 6.5 |     |     |     |     |
| 8                      | 4.5 | 4.5 | 4.5 | 4.5 | 5.0 | 5.0 | 5.5 | 6.5 |     |     |     |
| 9                      | 4.0 | 4.0 | 4.0 | 4.0 | 4.5 | 4.5 | 5.0 | 5.0 | 6.0 |     |     |
| 10                     | 4.0 | 4.0 | 4.0 | 4.0 | 4.0 | 4.0 | 4.5 | 5.0 | 5.5 | 8.0 |     |
| 11                     | 3.5 | 3.5 | 3.5 | 3.5 | 3.5 | 4.0 | 4.0 | 4.0 | 4.5 | 5.0 | 7.0 |

**Table 21: Transport time and average sensitivity**

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                 |                 |
|-----------------|--------------------|-------------------------------|-----------------|-----------------|-----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6  | Alarm Factor 8  |
| 1               | 5                  | 0.06<br>Class A               | 0.13<br>Class A | 0.40<br>Class A | 0.82<br>Class B |
| 2               | 16                 | 0.12<br>Class A               | 0.26<br>Class A | 0.80<br>Class B | 1.64<br>Class B |
| 3               | 20                 | 0.18<br>Class A               | 0.39<br>Class A | 1.20<br>Class B | 2.46<br>Class C |
| 4               | 38                 | 0.24<br>Class A               | 0.52<br>Class B | 1.60<br>Class B | 3.28<br>Class C |
| 5               | 46                 | 0.30<br>Class A               | 0.65<br>Class B | 2.00<br>Class B |                 |
| 6               | 61                 | 0.36<br>Class A               | 0.78<br>Class B | 2.40<br>Class C |                 |
| 7               | 60                 | 0.42<br>Class B               | 0.91<br>Class B | 2.80<br>Class C |                 |
| 8               | 67                 | 0.48<br>Class B               | 1.04<br>Class B | 3.20<br>Class C |                 |
| 9               | 70                 | 0.54<br>Class B               | 1.17<br>Class B | 3.60<br>Class C |                 |

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                |                |
|-----------------|--------------------|-------------------------------|-----------------|----------------|----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6 | Alarm Factor 8 |
| 10              | 81                 | 0.60<br>Class B               | 1.30<br>Class B |                |                |
| 11              | 81                 | 0.66<br>Class B               | 1.43<br>Class B |                |                |

## Fan speed 4

The following tables provide hole diameter, transport time, and average sensitivity values for fan speed 4.

**Table 22: Hole diameter (mm)**

| Pipe length (m)        | 5   | 12  | 19  | 26  | 33  | 40  | 47  | 54  | 61  | 68  | 75  |
|------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Hole ID                | A   | B   | C   | D   | E   | F   | G   | H   | I   | J   | K   |
| <b>Number of holes</b> |     |     |     |     |     |     |     |     |     |     |     |
| 1                      | 8.0 |     |     |     |     |     |     |     |     |     |     |
| 2                      | 8.0 | 8.0 |     |     |     |     |     |     |     |     |     |
| 3                      | 7.0 | 7.0 | 7.5 |     |     |     |     |     |     |     |     |
| 4                      | 6.0 | 7.0 | 8.0 | 8.0 |     |     |     |     |     |     |     |
| 5                      | 6.0 | 6.5 | 7.5 | 7.5 | 8.0 |     |     |     |     |     |     |
| 6                      | 6.0 | 6.0 | 7.0 | 7.5 | 7.5 | 8.0 |     |     |     |     |     |
| 7                      | 3.5 | 4.0 | 4.5 | 4.5 | 4.5 | 4.5 | 4.5 |     |     |     |     |
| 8                      | 3.5 | 4.0 | 5.5 | 5.5 | 5.5 | 5.5 | 6.0 | 7.0 |     |     |     |
| 9                      | 3.0 | 3.5 | 4.5 | 4.5 | 4.5 | 4.5 | 4.5 | 5.0 | 6.5 |     |     |
| 10                     | 3.0 | 3.5 | 4.5 | 4.5 | 4.5 | 4.5 | 4.5 | 4.5 | 5.0 | 6.0 |     |
| 11                     | 2.5 | 2.5 | 2.5 | 2.5 | 3.0 | 3.0 | 3.0 | 3.0 | 3.0 | 3.0 | 5.0 |

**Table 23: Transport time and average sensitivity**

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                 |                 |
|-----------------|--------------------|-------------------------------|-----------------|-----------------|-----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6  | Alarm Factor 8  |
| 1               | 4                  | 0.06<br>Class A               | 0.13<br>Class A | 0.40<br>Class A | 0.82<br>Class B |
| 2               | 9                  | 0.12<br>Class A               | 0.26<br>Class A | 0.80<br>Class B | 1.64<br>Class B |
| 3               | 17                 | 0.18<br>Class A               | 0.39<br>Class A | 1.20<br>Class B | 2.46<br>Class C |
| 4               | 26                 | 0.24<br>Class A               | 0.52<br>Class B | 1.60<br>Class B | 3.28<br>Class C |
| 5               | 39                 | 0.30<br>Class A               | 0.65<br>Class B | 2.00<br>Class B |                 |
| 6               | 61                 | 0.36<br>Class A               | 0.78<br>Class B | 2.40<br>Class C |                 |
| 7               | 72                 | 0.42<br>Class B               | 0.91<br>Class B | 2.80<br>Class C |                 |
| 8               | 78                 | 0.48<br>Class B               | 1.04<br>Class B | 3.20<br>Class C |                 |
| 9               | 80                 | 0.54<br>Class B               | 1.17<br>Class B | 3.60<br>Class C |                 |

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                |                |
|-----------------|--------------------|-------------------------------|-----------------|----------------|----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6 | Alarm Factor 8 |
| 10              | 83                 | 0.60<br>Class B               | 1.30<br>Class B |                |                |
| 11              | 94                 | 0.66<br>Class C               | 1.43<br>Class C |                |                |

## Fan speed 7

The following tables provide hole diameter, transport time, and average sensitivity values for fan speed 7.

**Table 24: Hole diameter (mm)**

| Pipe length (m)        | 5   | 12  | 19  | 26  | 33  | 40  | 47  | 54  | 61  | 68  | 75  | 82  |
|------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Hole ID                | A   | B   | C   | D   | E   | F   | G   | H   | I   | J   | K   | L   |
| <b>Number of holes</b> |     |     |     |     |     |     |     |     |     |     |     |     |
| 1                      | 8.0 |     |     |     |     |     |     |     |     |     |     |     |
| 2                      | 8.0 | 8.0 |     |     |     |     |     |     |     |     |     |     |
| 3                      | 7.0 | 7.0 | 7.5 |     |     |     |     |     |     |     |     |     |
| 4                      | 6.0 | 7.0 | 8.0 | 8.0 |     |     |     |     |     |     |     |     |
| 5                      | 4.0 | 4.5 | 5.0 | 5.0 | 5.0 |     |     |     |     |     |     |     |
| 6                      | 4.0 | 4.5 | 5.5 | 7.5 | 7.5 | 8.0 |     |     |     |     |     |     |
| 7                      | 3.5 | 4.0 | 4.5 | 6.0 | 6.5 | 6.5 | 7.0 |     |     |     |     |     |
| 8                      | 3.0 | 3.5 | 3.5 | 4.0 | 4.0 | 4.0 | 4.0 | 4.0 |     |     |     |     |
| 9                      | 3.0 | 3.0 | 3.5 | 4.0 | 4.5 | 4.5 | 4.5 | 4.5 | 4.5 |     |     |     |
| 10                     | 3.0 | 3.5 | 3.5 | 4.0 | 4.5 | 5.0 | 5.0 | 5.0 | 5.0 | 6.0 |     |     |
| 11                     | 2.5 | 2.5 | 3.0 | 3.5 | 4.5 | 5.0 | 5.0 | 5.0 | 5.0 | 5.5 | 7.0 |     |
| 12                     | 2.5 | 2.5 | 3.0 | 3.5 | 4.5 | 4.5 | 5.0 | 5.0 | 5.0 | 5.0 | 5.5 | 7.5 |

**Table 25: Transport time and average sensitivity**

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                 |                 |
|-----------------|--------------------|-------------------------------|-----------------|-----------------|-----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6  | Alarm Factor 8  |
| 1               | 3                  | 0.06<br>Class A               | 0.13<br>Class A | 0.40<br>Class A | 0.82<br>Class B |
| 2               | 7                  | 0.12<br>Class A               | 0.26<br>Class A | 0.80<br>Class B | 1.64<br>Class B |
| 3               | 12                 | 0.18<br>Class A               | 0.39<br>Class A | 1.20<br>Class B | 2.46<br>Class C |
| 4               | 20                 | 0.24<br>Class A               | 0.52<br>Class B | 1.60<br>Class B | 3.28<br>Class C |
| 5               | 31                 | 0.30<br>Class A               | 0.65<br>Class B | 2.00<br>Class B |                 |
| 6               | 36                 | 0.36<br>Class A               | 0.78<br>Class B | 2.40<br>Class C |                 |
| 7               | 47                 | 0.42<br>Class B               | 0.91<br>Class B | 2.80<br>Class C |                 |
| 8               | 68                 | 0.48<br>Class B               | 1.04<br>Class B | 3.20<br>Class C |                 |
| 9               | 79                 | 0.54<br>Class B               | 1.17<br>Class B | 3.60<br>Class C |                 |

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                |                |
|-----------------|--------------------|-------------------------------|-----------------|----------------|----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6 | Alarm Factor 8 |
| 10              | 84                 | 0.60<br>Class B               | 1.30<br>Class B |                |                |
| 11              | 91                 | 0.66<br>Class C               | 1.43<br>Class C |                |                |
| 12              | 90                 | 0.72<br>Class C               | 1.56<br>Class C |                |                |

## Fan speed 10

The following tables provide hole diameter, transport time, and average sensitivity values for fan speed 10.

**Table 26: Hole diameter (mm)**

| Pipe length (m)        | 5   | 12  | 19  | 26  | 33  | 40  | 47  | 54  | 61  | 68  | 75  | 82  | 89  | 96  |
|------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Hole ID                | A   | B   | C   | D   | E   | F   | G   | H   | I   | J   | K   | L   | M   | N   |
| <b>Number of holes</b> |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 1                      | 8.0 |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 2                      | 8.0 | 8.0 |     |     |     |     |     |     |     |     |     |     |     |     |
| 3                      | 7.0 | 7.0 | 7.5 |     |     |     |     |     |     |     |     |     |     |     |
| 4                      | 6.0 | 7.0 | 8.0 | 8.0 |     |     |     |     |     |     |     |     |     |     |
| 5                      | 4.5 | 5.0 | 6.0 | 7.0 | 7.0 |     |     |     |     |     |     |     |     |     |
| 6                      | 4.0 | 4.5 | 5.0 | 6.0 | 6.5 | 6.5 |     |     |     |     |     |     |     |     |
| 7                      | 4.0 | 4.0 | 4.5 | 5.5 | 7.5 | 7.5 | 7.5 |     |     |     |     |     |     |     |
| 8                      | 4.0 | 4.0 | 4.0 | 5.0 | 7.0 | 8.0 | 8.0 | 8.0 |     |     |     |     |     |     |
| 9                      | 4.0 | 4.0 | 4.0 | 4.5 | 6.0 | 7.0 | 7.0 | 7.5 | 8.0 |     |     |     |     |     |
| 10                     | 3.0 | 3.5 | 3.5 | 4.0 | 4.5 | 7.0 | 7.0 | 7.5 | 8.0 | 8.0 |     |     |     |     |
| 11                     | 2.5 | 2.5 | 3.0 | 3.0 | 3.5 | 4.0 | 4.0 | 4.0 | 4.0 | 4.0 | 4.0 |     |     |     |
| 12                     | 2.5 | 2.5 | 2.5 | 3.0 | 3.5 | 4.0 | 4.5 | 4.5 | 4.5 | 5.0 | 5.0 | 5.5 |     |     |
| 13                     | 2.5 | 2.5 | 2.5 | 3.0 | 3.5 | 3.5 | 4.5 | 4.5 | 4.5 | 5.0 | 5.0 | 5.0 | 8.0 |     |
| 14                     | 2.0 | 2.5 | 2.5 | 2.5 | 3.0 | 3.0 | 3.5 | 3.5 | 3.5 | 3.5 | 3.5 | 4.0 | 4.0 | 6.0 |

**Table 27: Transport time and average sensitivity**

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                 |                 |
|-----------------|--------------------|-------------------------------|-----------------|-----------------|-----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6  | Alarm Factor 8  |
| 1               | 2                  | 0.06<br>Class A               | 0.13<br>Class A | 0.40<br>Class A | 0.82<br>Class B |
| 2               | 5                  | 0.12<br>Class A               | 0.26<br>Class A | 0.80<br>Class B | 1.64<br>Class B |
| 3               | 10                 | 0.18<br>Class A               | 0.39<br>Class A | 1.20<br>Class B | 2.46<br>Class C |
| 4               | 16                 | 0.24<br>Class A               | 0.52<br>Class B | 1.60<br>Class B | 3.28<br>Class C |
| 5               | 22                 | 0.30<br>Class A               | 0.65<br>Class B | 2.00<br>Class B |                 |
| 6               | 30                 | 0.36<br>Class A               | 0.78<br>Class B | 2.40<br>Class C |                 |
| 7               | 39                 | 0.42<br>Class B               | 0.91<br>Class B | 2.80<br>Class C |                 |

| Number of holes | Transport Time (s) | Average sensitivity (% obs/m) |                 |                 |                |
|-----------------|--------------------|-------------------------------|-----------------|-----------------|----------------|
|                 |                    | Alarm Factor 2                | Alarm Factor 4  | Alarm Factor 6  | Alarm Factor 8 |
| 8               | 54                 | 0.48<br>Class B               | 1.04<br>Class B | 3.20<br>Class C |                |
| 9               | 69                 | 0.54<br>Class B               | 1.17<br>Class B | 3.60<br>Class C |                |
| 10              | 76                 | 0.60<br>Class B               | 1.30<br>Class B |                 |                |
| 11              | 90                 | 0.66<br>Class C               | 1.43<br>Class C |                 |                |
| 12              | 87                 | 0.72<br>Class C               | 1.56<br>Class C |                 |                |
| 13              | 87                 | 0.78<br>Class C               | 1.69<br>Class C |                 |                |
| 14              | 89                 | 0.84<br>Class C               | 1.82<br>Class C |                 |                |



# Chapter 6

## Technical specifications

### Power supply

|                                 |                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Supply voltage                  | 18 to 30 VDC, 24 VDC nominal<br>21.2 to 27.2 VDC, 24 VDC nominal (UL/cUL and FM)                                                                                                                                                              |
| Current consumption (at 24 VDC) | 120 mA (fan speed 1)<br>134 mA (fan speed 2)<br>157 mA (fan speed 3)<br>180 mA (fan speed 4)<br>200 mA (fan speed 5)<br>230 mA (fan speed 6)<br>255 mA (fan speed 7)<br>285 mA (fan speed 8)<br>320 mA (fan speed 9)<br>365 mA (fan speed 10) |

### Communications

|              |       |
|--------------|-------|
| Connectivity | USB-C |
|--------------|-------|

### Inputs and outputs

|                        |                        |
|------------------------|------------------------|
| Inputs                 |                        |
| Number of inputs       | 1                      |
| End-of-line resistance | 15 K $\Omega$ 5% 1/4 W |
| Outputs                |                        |
| Number of outputs      | 3                      |
| Contact type           | C/NO/NC, voltage free  |
| Resistive load         | 2 A at 30 VDC          |

## Aspirating system

|                                                                   |                                                                                                                        |
|-------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Detection principle                                               | Laser light scattering mass detection                                                                                  |
| Laser                                                             |                                                                                                                        |
| Safety class                                                      | Class 1                                                                                                                |
| Laser diode                                                       | Class 3B                                                                                                               |
| Sensitivity range                                                 |                                                                                                                        |
| %obs/m                                                            | 25% min.<br>0.03% max. FSD                                                                                             |
| %obs/ft.                                                          | 7.62% min.<br>0.00914% max. FSD                                                                                        |
| Particle sensitivity range                                        | 0.0003 to 10 microns                                                                                                   |
| Velocity range                                                    | 0 to 20 m/s (0 to 4000 ft./min)                                                                                        |
| Alarm levels [1]                                                  | 4 (Alert/Aux. Alarm, Prealarm, Fire Alarm, Fire Alarm 2)                                                               |
| Fan speed                                                         | Configurable (1 to 10)                                                                                                 |
| Air flow measurement                                              |                                                                                                                        |
| Range                                                             | 1 to 6 m/s (3.3 to 19.6 ft./s)                                                                                         |
| Resolution                                                        | 0.05 m/s (0.16 ft./s)                                                                                                  |
| Note: Absolute readings of air velocity (temperature compensated) |                                                                                                                        |
| Duct air velocity [2]                                             | 1219 m/min max. (4000 ft./min) (UL)                                                                                    |
| Sampling pipe inlets                                              | 1                                                                                                                      |
| Exhaust pipe                                                      | 1                                                                                                                      |
| Pipe size (external diameter)                                     | 26.75 mm and 25.0 mm Ø (1.050 in. and 0.984 in.)                                                                       |
| Pipe length                                                       |                                                                                                                        |
| Single pipe                                                       | 110 m max.                                                                                                             |
| Combined, with up to 3 t-pieces                                   | 125 m max.                                                                                                             |
| Sampling holes per pipe (EN 54-20 sensitivity class)              | 10 holes max. for Class A (most sensitive)<br>20 holes max. for Class B<br>35 holes max. for Class C (least sensitive) |
| Average sound pressure level                                      | 38.8 dBA (fan speed 6)                                                                                                 |
| Chart record [3]                                                  | From 1 month at 1 s resolution up to 5 years at 60 s resolution                                                        |
| Event log [3]                                                     | 20,000 events                                                                                                          |

[1] Alert/Aux and Fire Alarm 2 are only available via the relay outputs.

[2] Configuration for duct applications is only available when Remote configuration is selected.

[3] The Chart record and Event log can only be accessed using the Remote application (see "Connecting to Remote" on page 24).

## Mechanical and environmental

**Table 28: Mechanical**

|                              |                                                     |
|------------------------------|-----------------------------------------------------|
| Dimensions (W x H x D)       |                                                     |
| Detector                     | 110.5 × 300 × 133.5 mm<br>(4.35 × 11.81 × 5.25 in.) |
| User interface               | 55 × 300 × 133.5 mm<br>(2.2 × 11.81 × 5.25 in.)     |
| Weight (including backplane) |                                                     |
| Detector                     | 1.57 kg (3.46 lb.)                                  |
| User interface               | 0.58 kg (1.28 lb.)                                  |
| Number of cable knockouts    |                                                     |
| Top                          | 2 × Ø 20.7 mm (0.815 in)                            |
| Bottom                       | 2 × Ø 20.7 mm (0.815 in)                            |
| IP rating                    | IP40                                                |
| Flammability rating          | UL94 V0                                             |
| Dust filter replacement      | Timed warning integrated.                           |
| Detector chamber maintenance | Subject to installation environment                 |

**Table 29: Environmental**

|                       |                                                                                                                                |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Operating temperature | −10 to +60°C (0 to 38°C UL/cUL, 0 to 49°C FM)                                                                                  |
| Storage temperature   | −20 to +60°C                                                                                                                   |
| Relative humidity     | +5 to 95% noncondensing (0 to 90% for UL/cUL and FM)<br><br>IEC 61010-1 Pollution degree 1<br>IEC 61010-1 Installation Cat. II |



# Appendix A

## Regulatory information

### Europe

#### European regulations for construction products

This section provides a summary on the declared performance according to the Construction Products Regulation (EU) 305/2011 and Delegated Regulations (EU) 157/2014 and (EU) 574/2014.

For detailed information, see the product Declaration of Performance (available at [firesecurityproducts.com](http://firesecurityproducts.com)).

**Table 30: Regulatory information**

|                                   |                                                                                                                                                                                                                                                    |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Conformity                        | <b>CE</b>                                                                                                                                                                                                                                          |
| Notified/Approved body            | 0370                                                                                                                                                                                                                                               |
| Manufacturer                      | KGS Safety System (Hebei) Co. Ltd.,<br>80 Changjiang East Road, QETDZ, Qinhuangdao 066004,<br>Hebei, China.<br><br>Authorized EU manufacturing representative:<br>KGS Fire & Security B.V., Kelvinstraat 7, NL-6003 DH, Weert,<br>The Netherlands. |
| Year of first CE marking          | 25                                                                                                                                                                                                                                                 |
| Declaration of Performance number | 3103107-ML                                                                                                                                                                                                                                         |
| Standards                         | EN 54-20 Classes A, B, and C<br>EN 54-18 [1]                                                                                                                                                                                                       |
| Product identification            | 9-30501                                                                                                                                                                                                                                            |
| Intended use                      | See the product Declaration of Performance                                                                                                                                                                                                         |
| Declared performance              | See the product Declaration of Performance                                                                                                                                                                                                         |

[1] When used with the 9-30520 MiniLaser Expansion Housing and 9-30521 MiniLaser I/O Functional Module.

## EN 54-20 compliance

To comply with EN 54-20 requirements:

- All pipes used in the installation must conform to EN 61386-1 Class 1131.
- The Class of any pipework and hole configuration, detector sensitivity and equipment parameters must be determined using PipeCAD software. The applicable values for each Class are shown below.

| Class | Hole sensitivity (% obs/m) | Transport time (s) |
|-------|----------------------------|--------------------|
| A     | < 0.41                     | < 75               |
| B     | < 2.221                    | < 85               |
| C     | < 3.78                     | < 90               |

- The transport time of the last sampling hole must be checked after installation and must be less than or equal to that determined by PipeCAD.
- The flow low and flow high settings must be set to a value not exceeding 20%.
- The detector must be powered by a suitable EN 54-4 approved power supply.
- All cable glands must be rated IP67 or higher.

For more information on PipeCAD, see your PipeCAD documentation.

## European standards for electrical safety and electromagnetic compatibility

These products have been designed in accordance with the following European standards for electrical safety and electromagnetic compatibility:

- EN 62368-1
- EN 50130-4
- EN 61000-6-3
- EN 61000-3-2
- EN 61000-3-3

## Australia

These products have been designed in accordance with AS 7240.20 Fire detection and alarm systems – Aspirating smoke detectors.

## North America and Canada

These products have been designed to meet the following requirements:

- NFPA 72 National Fire Alarm and Signalling Code
- UL 268 Smoke Detectors for Fire Alarm Signalling Systems
- UL 864 Control Units for Fire Protective Signalling Systems
- FM 3230 Smoke Actuated Detectors for Automatic Fire Alarm Signalling
- CSFM California State Fire Marshal
- CAN/ULC-S529 Smoke Detectors for Fire Alarm Systems
- CAN/ULC-S524 Installation of Fire Alarm Systems
- ULC S527 Control Units for Fire Alarm Systems

System reacceptance test after reprogramming (UL/ULC and FM): To ensure proper system operation, this system must be retested in accordance with NFPA 72 after any programming change. Reacceptance testing is also required after any addition or deletion of system components, and after any modification, repair, or adjustment to system hardware, or wiring.

# Index

## A

alarm delay, DIP switch settings, 30  
alarm factor, DIP switch settings, 28

## C

cables, recommended, 16  
commissioning  
    configuration check, 32  
    installation inspection, 31  
    tests, 32  
configuration  
    configuration method, 26  
    local, alarm delay, 30  
    local, alarm factor, 28  
    local, default settings, 27  
    local, fan speed, 28  
    local, flow fault delay, 29  
    local, flow fault level, 29  
    system reset, 42  
configuration method, local or Remote, 26  
connections  
    fire alarm control panel, 19  
    input, 18  
    inputs, outputs, power supply, 17  
    outputs, 19  
    power supply, 19  
    recommended cables, 16  
    Remote, 23  
    ribbon cable, 18

## D

DIP switch settings  
    alarm delay, 30  
    alarm factor, 28  
    fan speed, 28  
    flow fault delay, 29  
    flow fault level, 29  
dust filter, replacement, 39

## F

fan speed, DIP switch settings, 28  
fire alarm control panel, connection, 19  
firmware

updates, 42  
version, 42

flow fault delay, DIP switch settings, 29  
flow fault level, DIP switch settings, 29

## I

input, connection, 18  
installation  
    backplanes, 12  
    general guidelines, 9  
    joining clips, 15  
    pipe adaptor, 21  
    pipes, 21  
    user interface, detector, 20  
    user interface, detector backplanes, 11

## L

LED indications, 6

## M

maintenance  
    dust filter, 39  
    tests, 38

## O

output, connection, 19

## P

pipe  
    installation, 21  
    pipe adaptor, 21  
pipe installation  
    I-shape, fan speed 10, 56  
    I-shape, fan speed 2, 50  
    I-shape, fan speed 4, 52  
    I-shape, fan speed 7, 54  
    T-shape, fan speed 10, 48  
    T-shape, fan speed 2, 45  
    T-shape, fan speed 4, 46  
    T-shape, fan speed 7, 47  
power supply, connection, 19

## **R**

Remote, connection, 23

## **T**

troubleshooting, 40

## **U**

user interface

- LED indications, 6

- LEDs, 5



